


BETTER HOMES & GARDENS EZRA L-DESK WITH 6-CUBE STORAGE

VENDOR STOCK NUMBERS
BH5436118664003-WALNUT
BH5436118664004-LIGHT HONEY

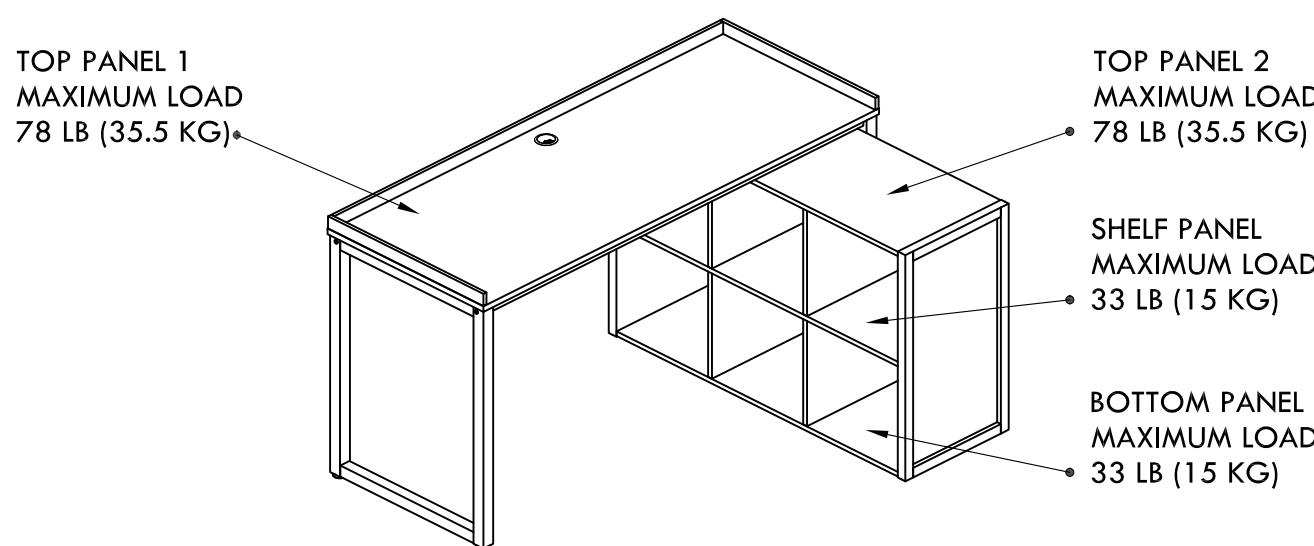

RECOMMENDED NUMBER OF PEOPLE FOR ASSEMBLY: 2


ESTIMATED ASSEMBLY TIME: 1 HOUR

- CALL OUR TOLL FREE NUMBER **1-800-729-1569** FOR FURTHER ASSISTANCE.
- ADDITIONAL PARTS ARE AVAILABLE FOR A FEE.
- THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.
- DO NOT ALLOW CHILDREN TO CLIMB OR PLAY ON THE UNIT.
- TO CLEAN, WIPE WITH A SOFT DAMP CLOTH.
- DO NOT USE HARSH CHEMICALS OR ABRASIVE CLEANERS.
- MOVE YOUR NEW FURNITURE CAREFULLY WITH TWO PEOPLE. NEVER PUSH OR DRAG THE UNIT.

DO NOT RETURN THE PRODUCT TO THE STORE.
INDIVIDUAL STORES DO NOT STOCK PARTS.
FOR MISSING OR DAMAGED PARTS CALL
1-800-729-1569.
PARTS WILL BE SHIPPED FREE OF CHARGE.

FOR PROMPT, RELIABLE SERVICE, PLEASE HAVE
YOUR ASSEMBLY MANUAL READY.

LOT NUMBER _____
DATE OF PURCHASE ____/____/____

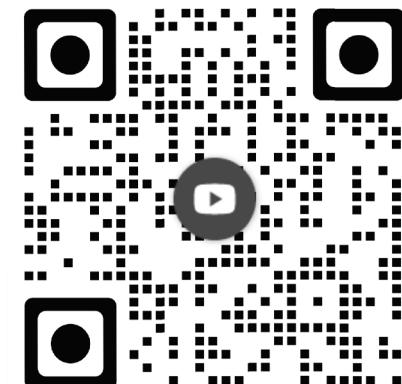

Scan the code above for a
video assembly guide

Huisen Furniture (Longnan) Co., Ltd.
Designed in the USA
Made in China



We are available to assist you Monday -Friday
from 9:00 am - 5:00 pm Eastern Standard Time.
1-800-729-1569
USA only.

BETTER HOMES & GARDENS EZRA L-DESK WITH 6-CUBE STORAGE

VENDOR STOCK NUMBERS
BH5436118664003-WALNUT
BH5436118664004-LIGHT HONEY





BEFORE STARTING

- Read and understand all the steps carefully before starting. If each step is not followed in the correct order the assembly will be difficult and may result in damages.
- Work in a spacious area, preferably on a carpeted surface, near where the unit will be used.
- Make sure all the parts are included. Most boards are labeled with a removable sticker.


Helpful hints

- Call our toll free number if you need assistance. We are available to assist you Monday - Friday from 9:00 am - 5:00 pm Eastern Standard Time.
- **1-800-729-1569** USA only. Or submit a request through our self-service portal at www.huisenfurniture.zendesk.com

TOOLS NEEDED TO ASSEMBLE

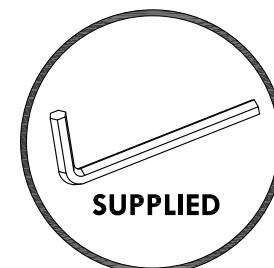

flat head
screwdriver



phillips head
screwdriver



**DO NOT USE POWER TOOLS TO ASSEMBLE
YOUR FURNITURE. POWER TOOLS MAY
RESULT IN DAMAGE.**


Huisen Furniture (Longnan) Co.,Ltd.
Designed in the USA
Made in China




We are available to assist you Monday - Friday
from 9:00 am - 5:00 pm Eastern Standard Time.
1-800-729-1569
USA only.

BETTER HOMES & GARDENS EZRA L-DESK WITH 6-CUBE STORAGE


VENDOR STOCK NUMBERS
BH5436118664003-WALNUT
BH5436118664004-LIGHT HONEY

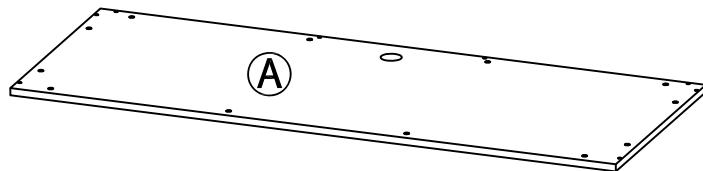


Top Panel 1
(Qty: 1)




Back Rail
(Qty: 1)

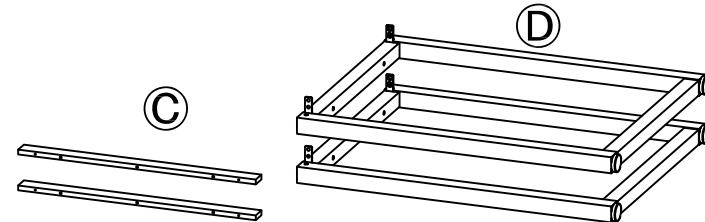


Side Rail
(Qty: 2)

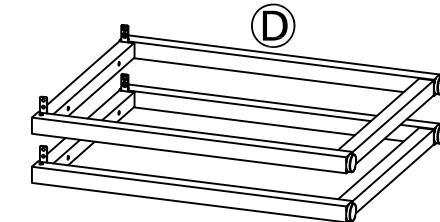


Side Frame
(Qty: 2)

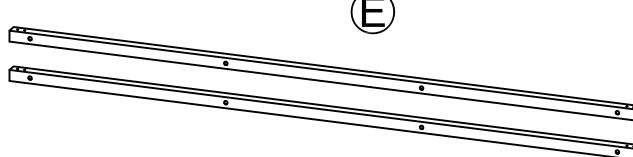


Metal Tube
(Qty: 2)

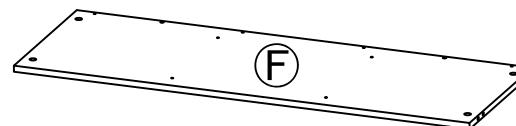


Top Panel 2
(Qty: 1)

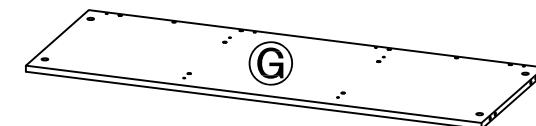


Shelf Panel
(Qty: 1)

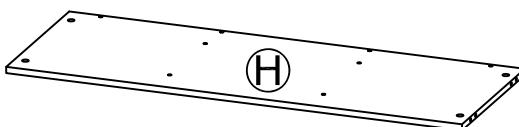


Bottom Panel
(Qty: 1)

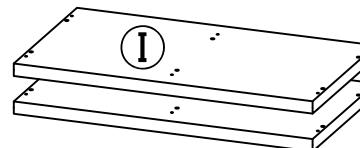

Side Panel
(Qty: 2)

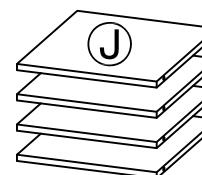

Partition Board
(Qty: 4)

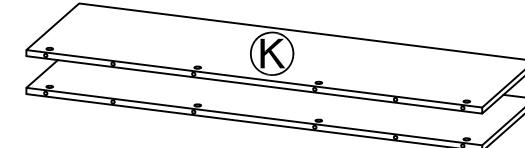

Back Panel
(Qty: 2)


VERIFY THAT ALL PARTS ARE PRESENT BEFORE BEGINNING




We are available to assist you Monday -Friday
from 9:00 am - 5:00 pm Eastern Standard Time.
1-800-729-1569
USA only.

BETTER HOMES & GARDENS EZRA L-DESK WITH 6-CUBE STORAGE

VENDOR STOCK NUMBERS
BH5436118664003-WALNUT
BH5436118664004-LIGHT HONEY

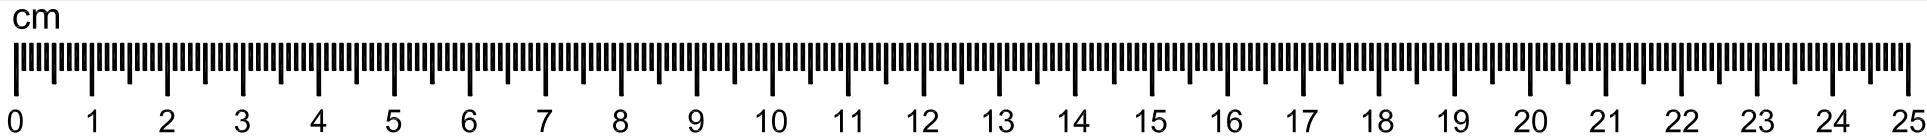


①




Screw Bolt 1
Qty: 4

②



Screw Bolt 2
Qty: 4

③




Screw Bolt 3
Qty: 8


④



Screw Bolt 4
Qty: 8

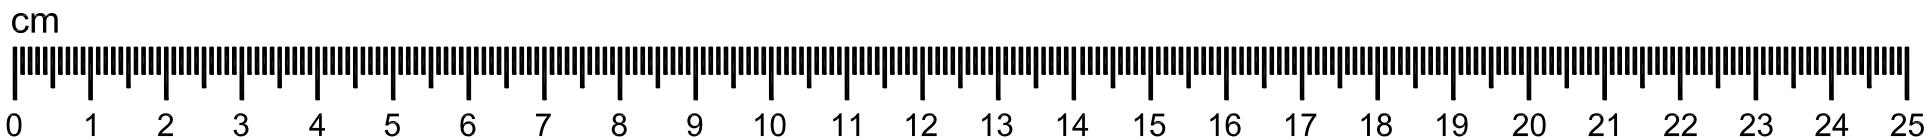


⑤

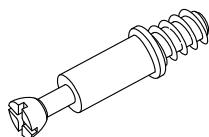


Cam Bolt
Qty: 28+1 Extra

⑥

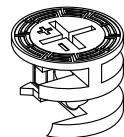


Cam Lock
Qty: 28+1 Extra

⑦



Wood Dowel
Qty: 32+1 Extra

⑧



Plastic Dowel
Qty: 10



VERIFY THAT ALL PARTS ARE PRESENT BEFORE BEGINNING




We are available to assist you Monday -Friday
from 9:00 am - 5:00 pm Eastern Standard Time.
1-800-729-1569
USA only.

BETTER HOMES & GARDENS EZRA L-DESK WITH 6-CUBE STORAGE


VENDOR STOCK NUMBERS
BH5436118664003-WALNUT
BH5436118664004-LIGHT HONEY

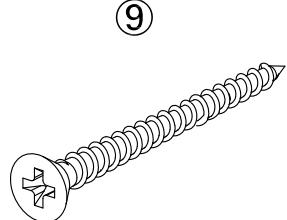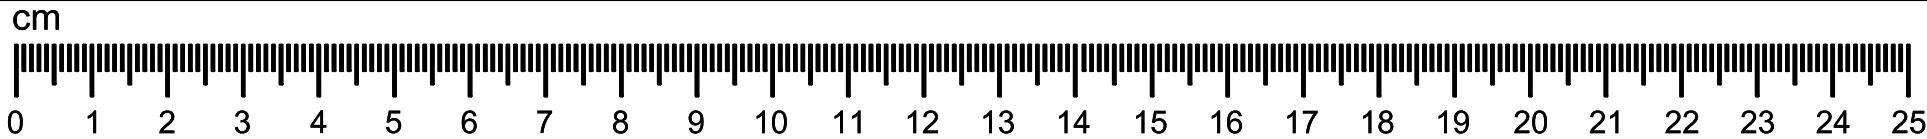

Screw
Qty: 24+1 Extra

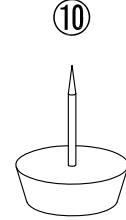



Floor Protector
Qty: 4



Cap
Qty: 8



Grommet
Qty: 1

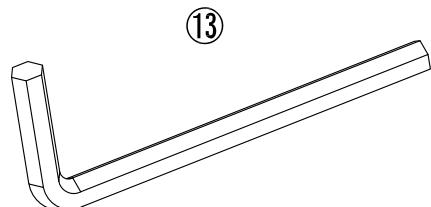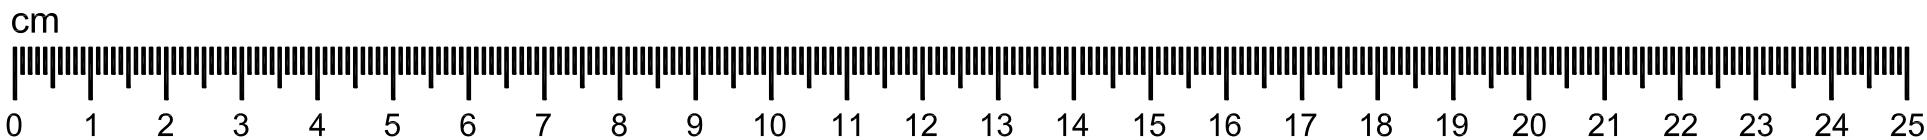

Allen Key
Qty: 1


VERIFY THAT ALL PARTS ARE PRESENT BEFORE BEGINNING



We are available to assist you Monday -Friday
from 9:00 am - 5:00 pm Eastern Standard Time.
1-800-729-1569
USA only.

BETTER HOMES & GARDENS EZRA L-DESK WITH 6-CUBE STORAGE

VENDOR STOCK NUMBERS
BH5436118664003-WALNUT
BH5436118664004-LIGHT HONEY

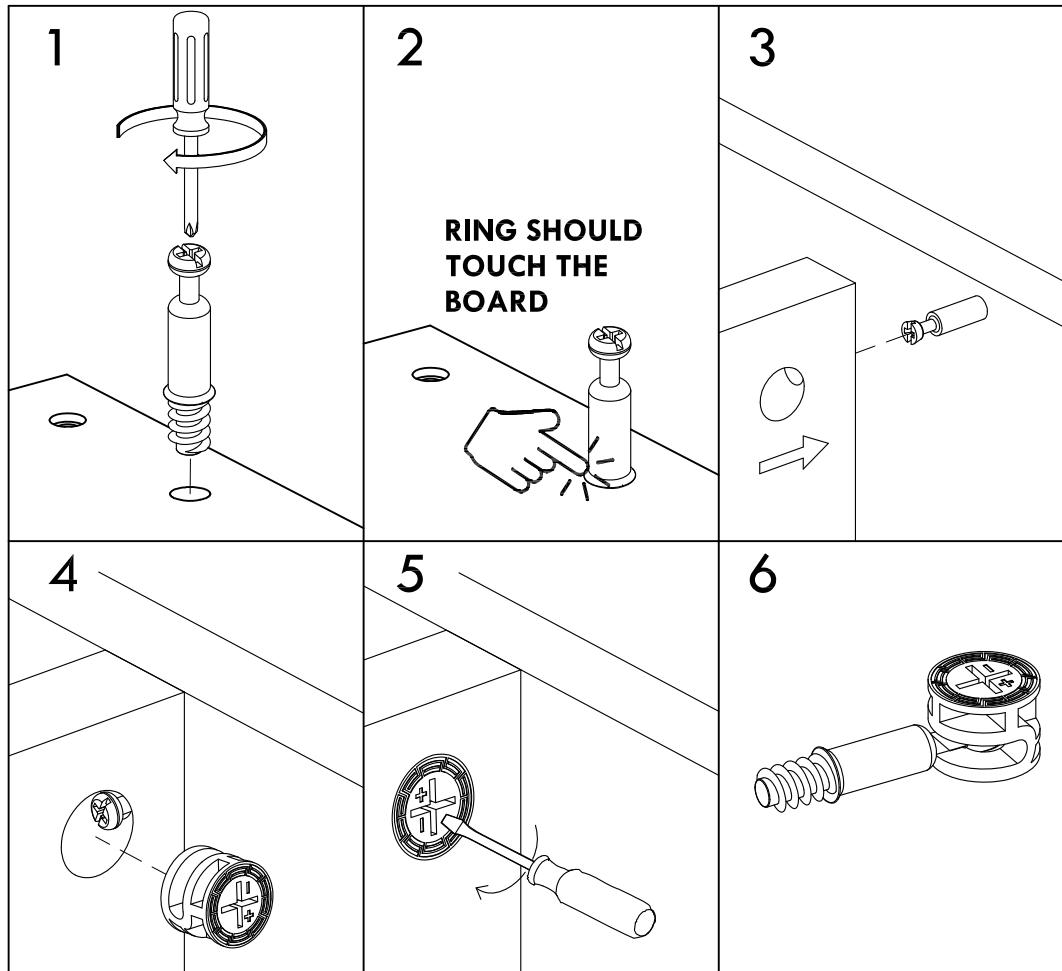





VERIFY THAT ALL PARTS ARE PRESENT BEFORE BEGINNING



We are available to assist you Monday -Friday
from 9:00 am - 5:00 pm Eastern Standard Time.
1-800-729-1569
USA only.

1



Insert Plastic Dowels ⑧ into Back Rail (B) & Side Rails (C).

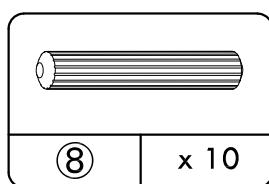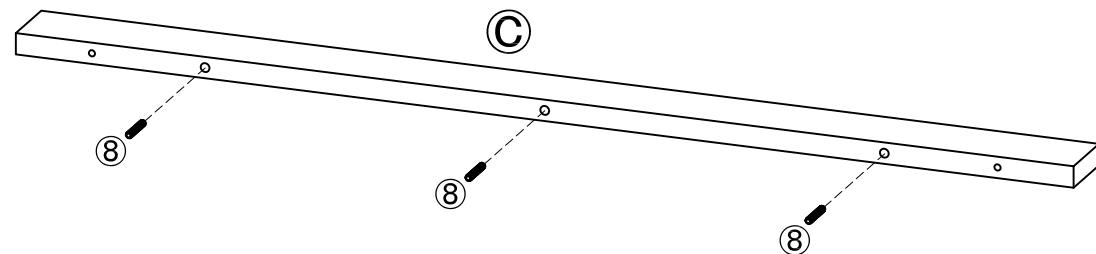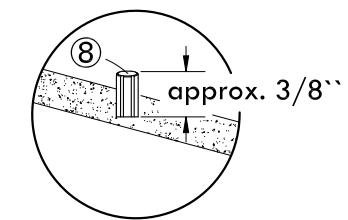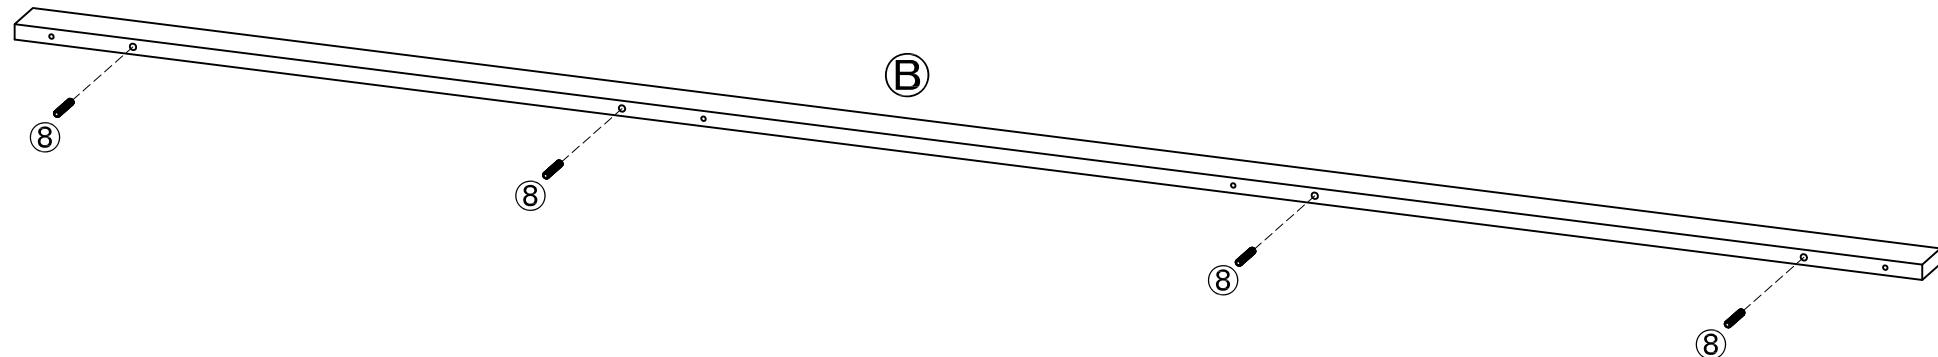

Plastic Dowel




2

Connect Back Rail (B) & Side Rails (C) to Top Panel 1 (A) and use Screws ⑨ to attach.

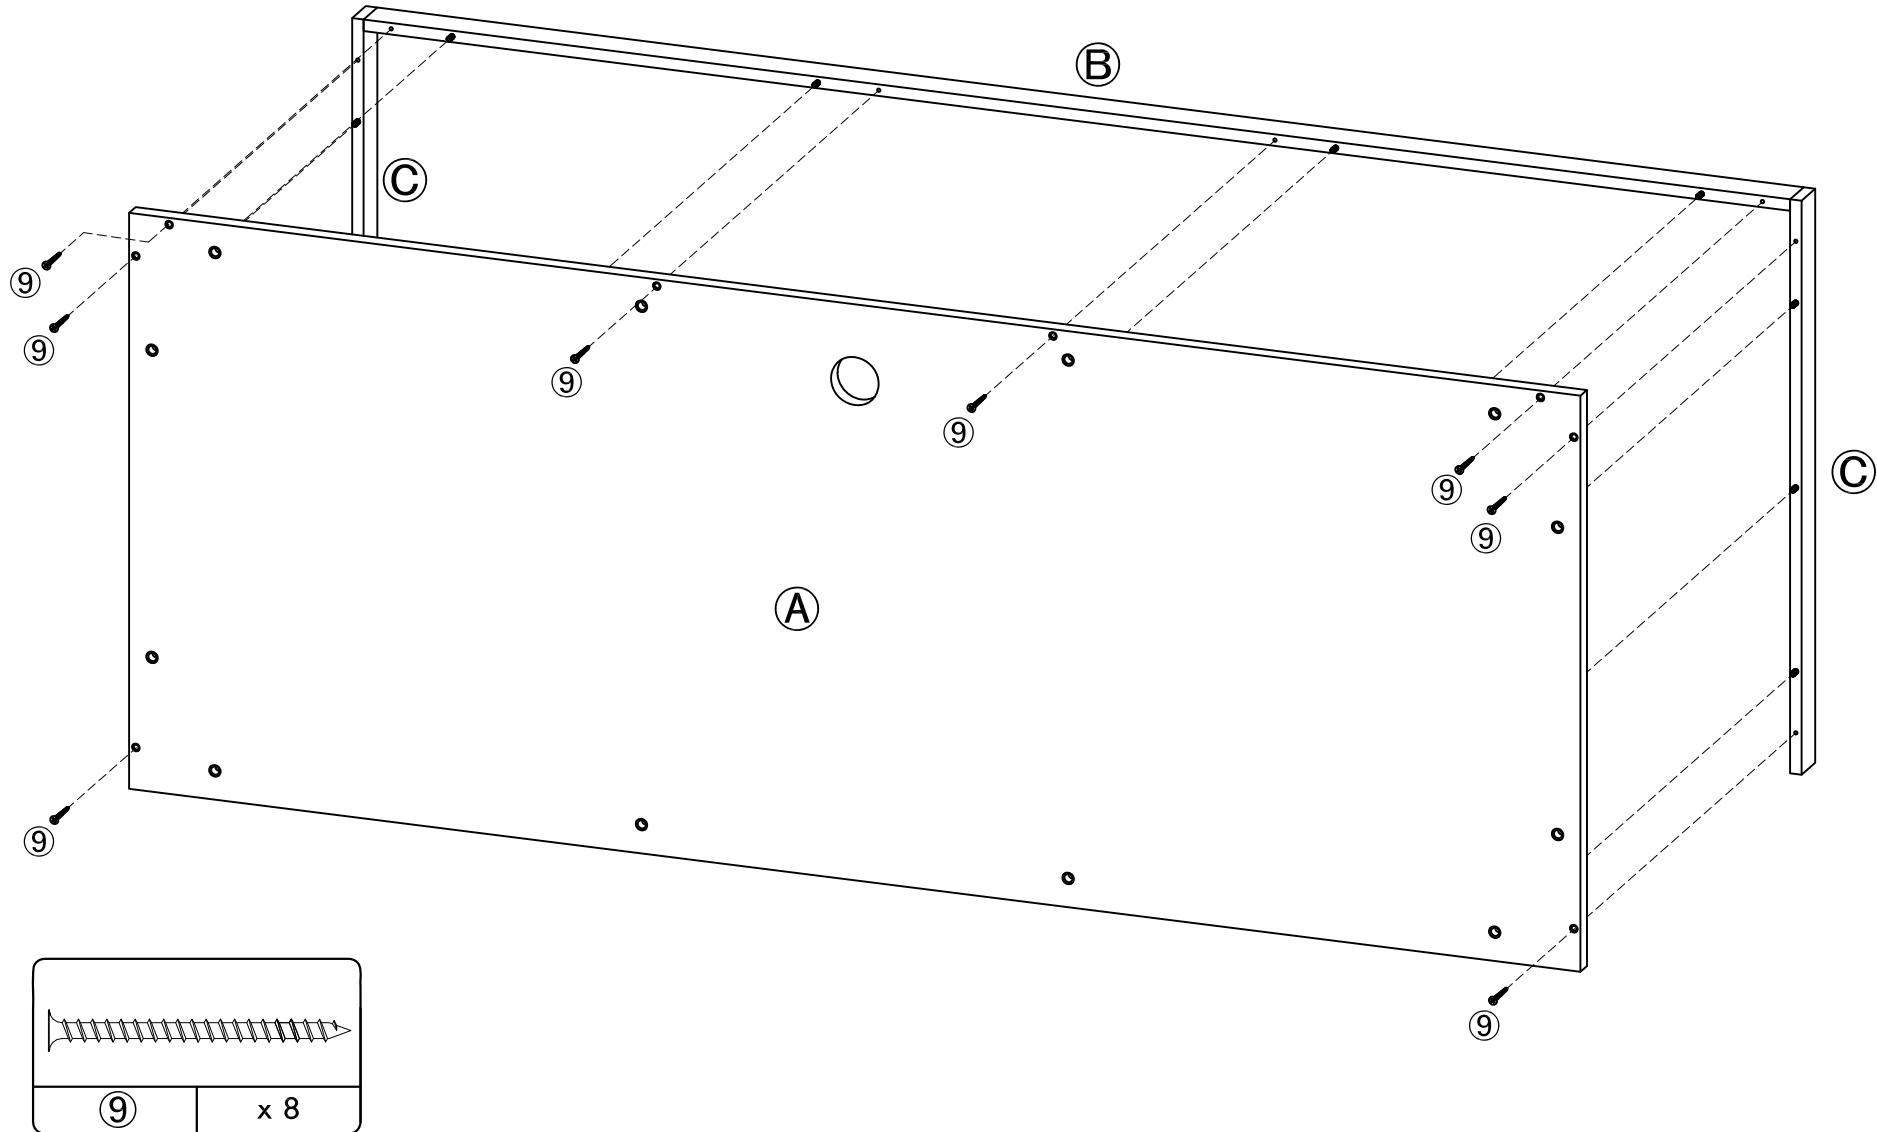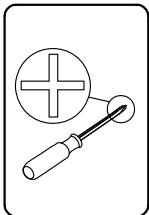

3




Use Screw Bolt ① to attach Metal Tubes (E) between Side Frames (D). Fully tighten screw bolts before moving to next step.

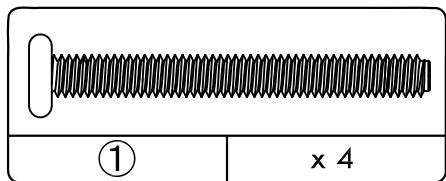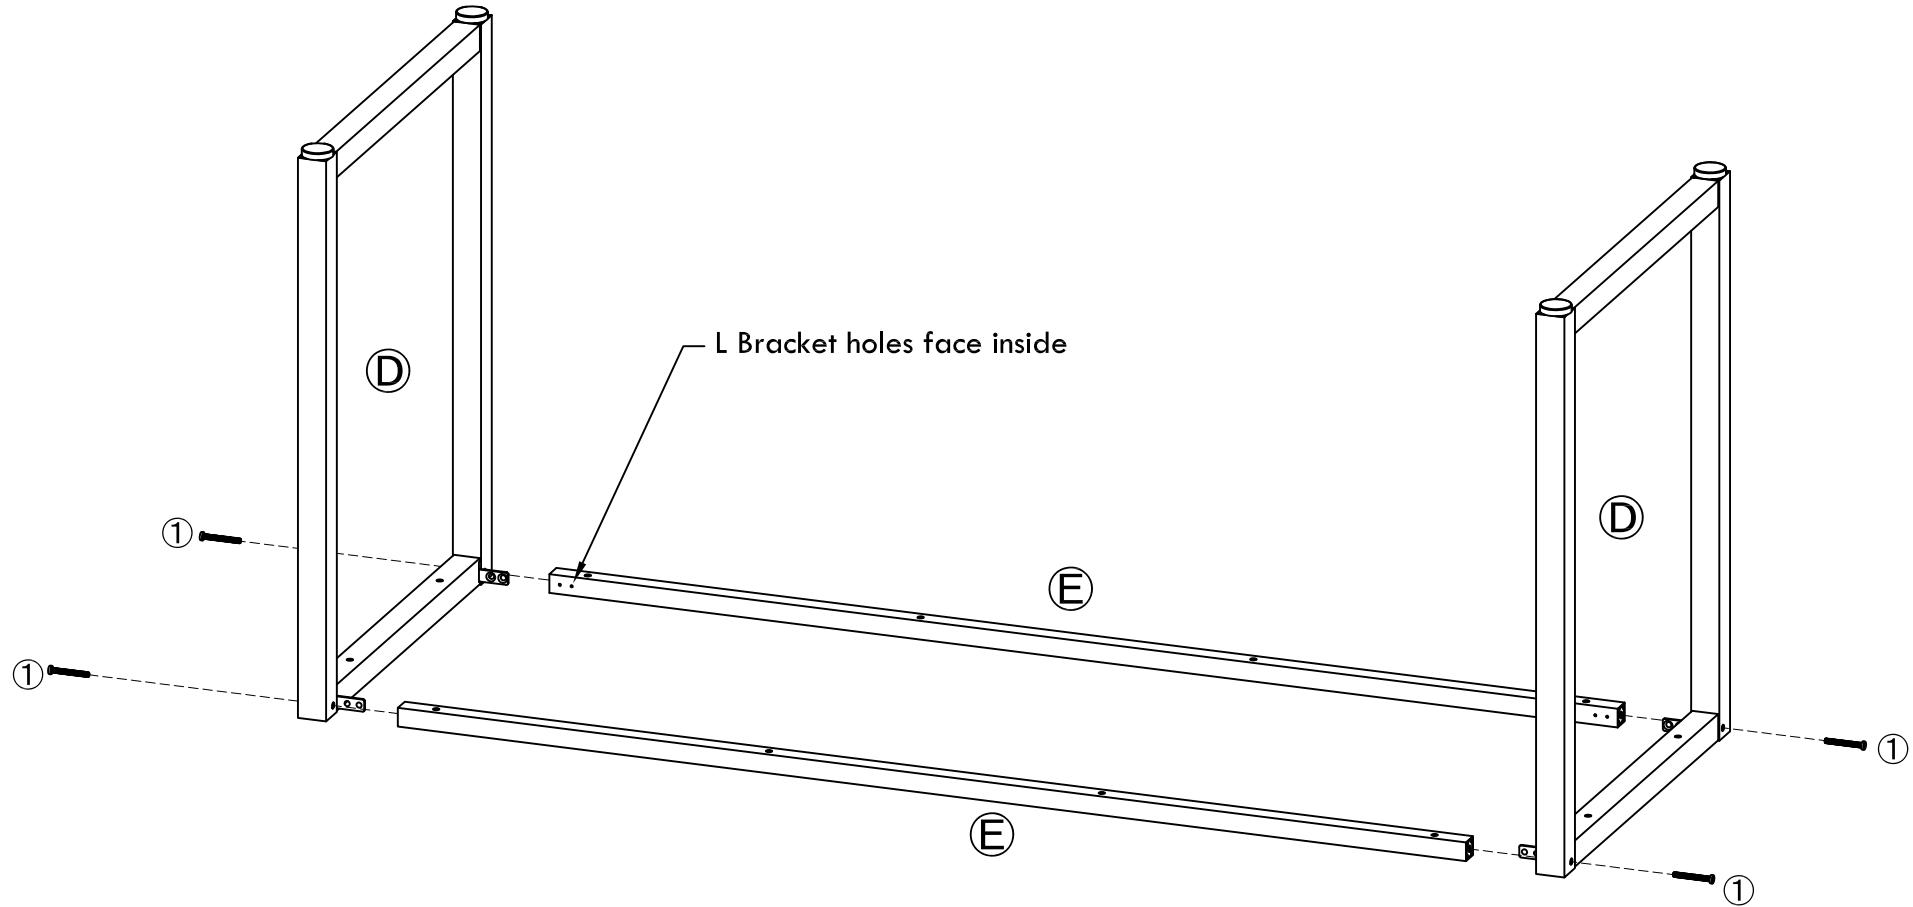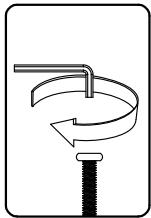

Screw Bolt 1

4




Use Screw Bolt ④ to secure Metal Tubes (E) to Side Frames (D).
Fully tighten screw bolts before moving to next step.

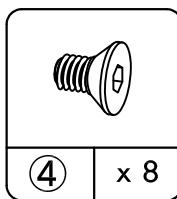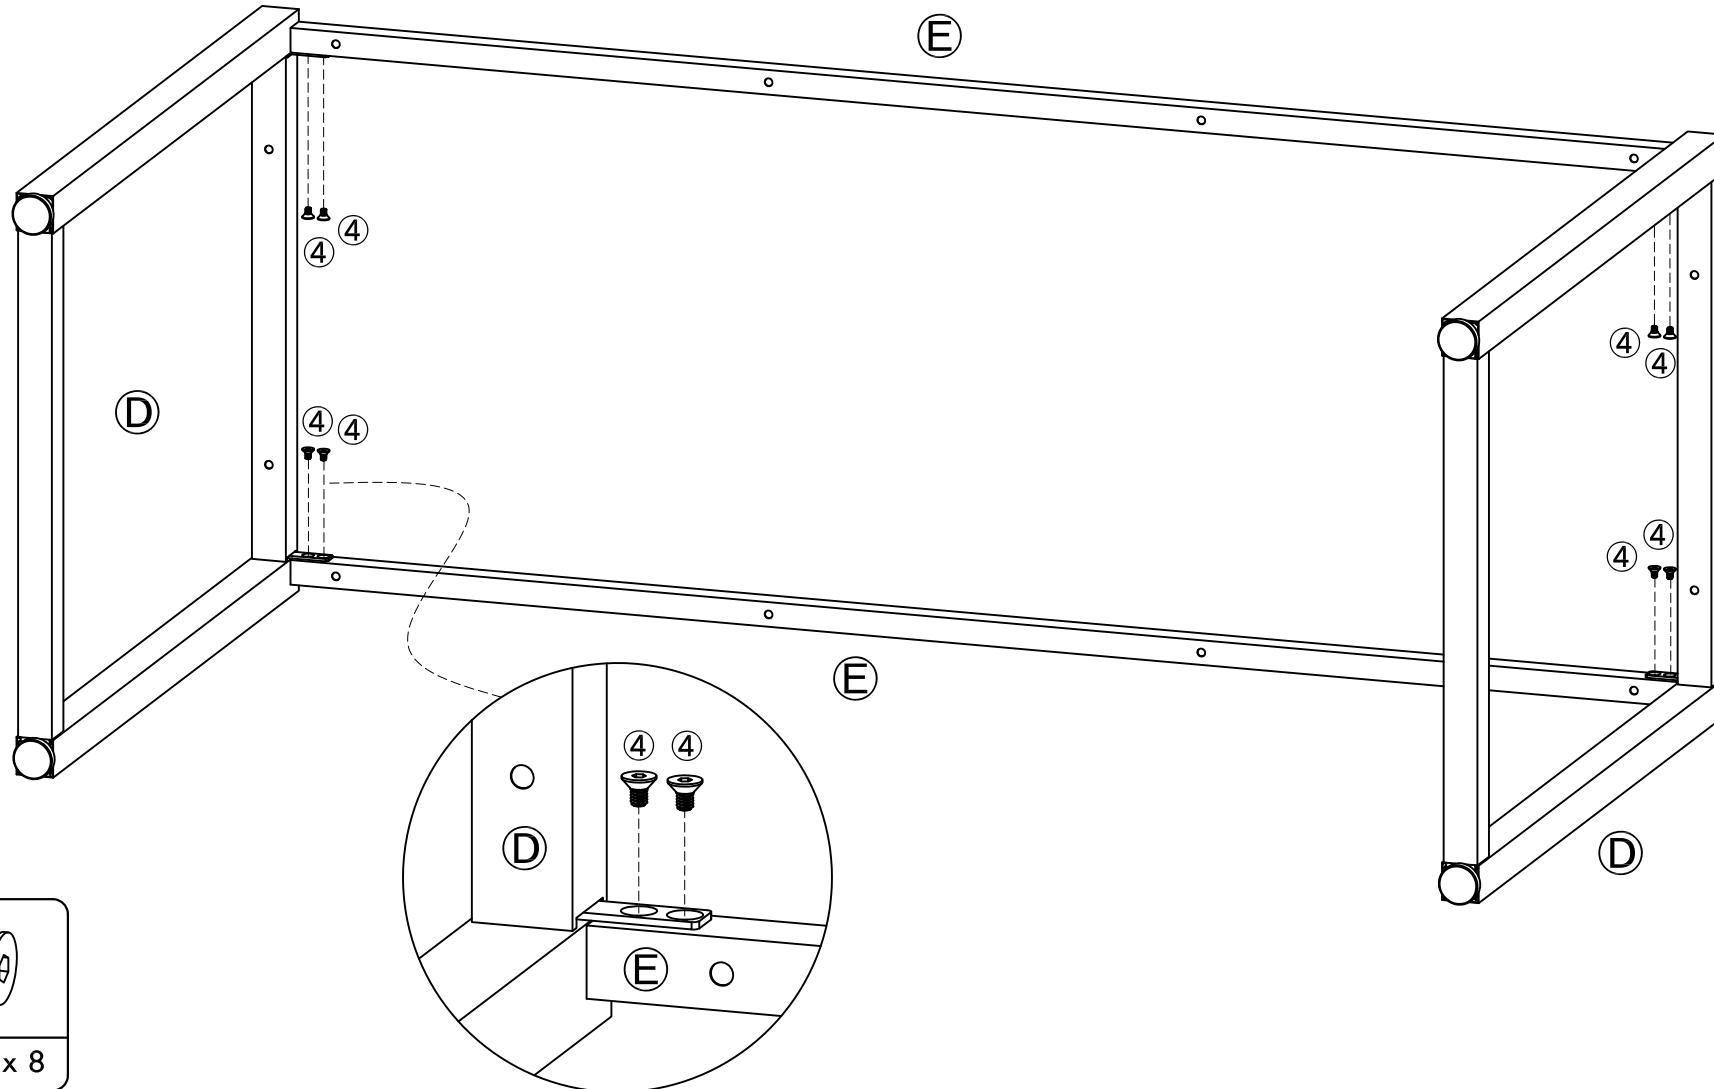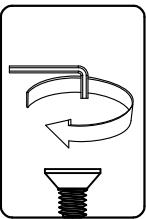


Screw Bolt 4

5

Use Screw Bolt ② to secure Side Frames (D) to Top Panel 1 (A).
Use Screw Bolt ③ to secure Metal Tubes (E) to Top Panel 1 (A).
Fully tighten screw bolts before moving to next step.

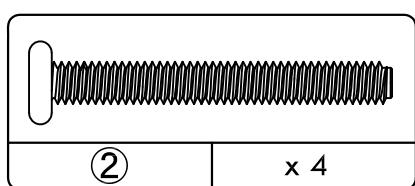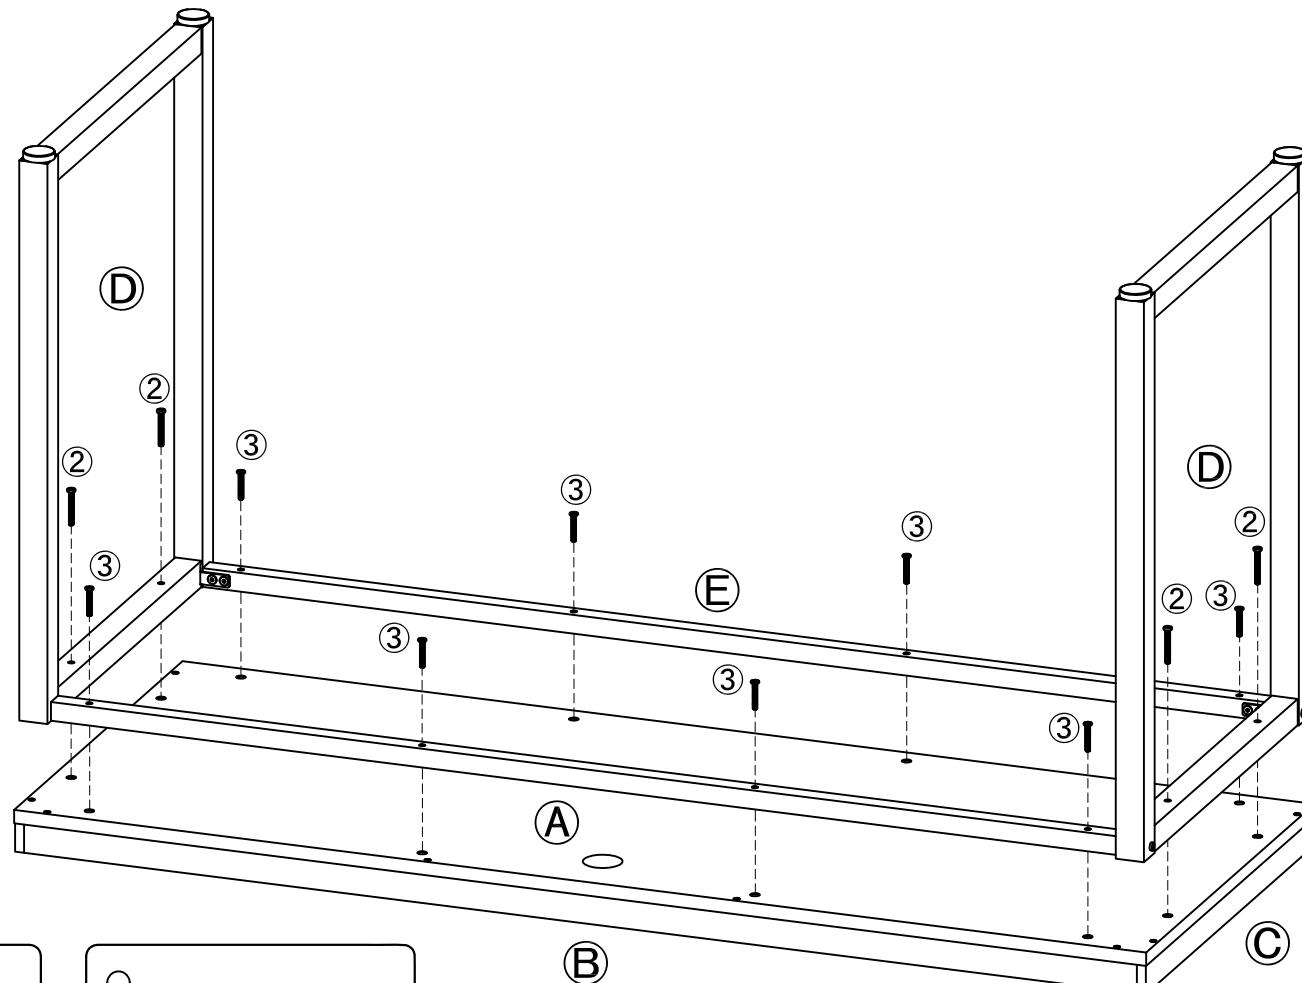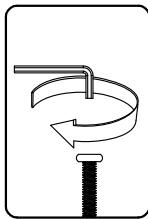


Screw Bolt 2

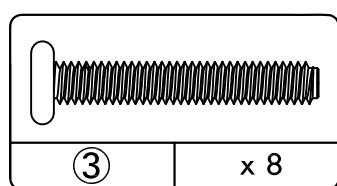

Screw Bolt 3

6


Insert Grommet ⑫ into desktop.

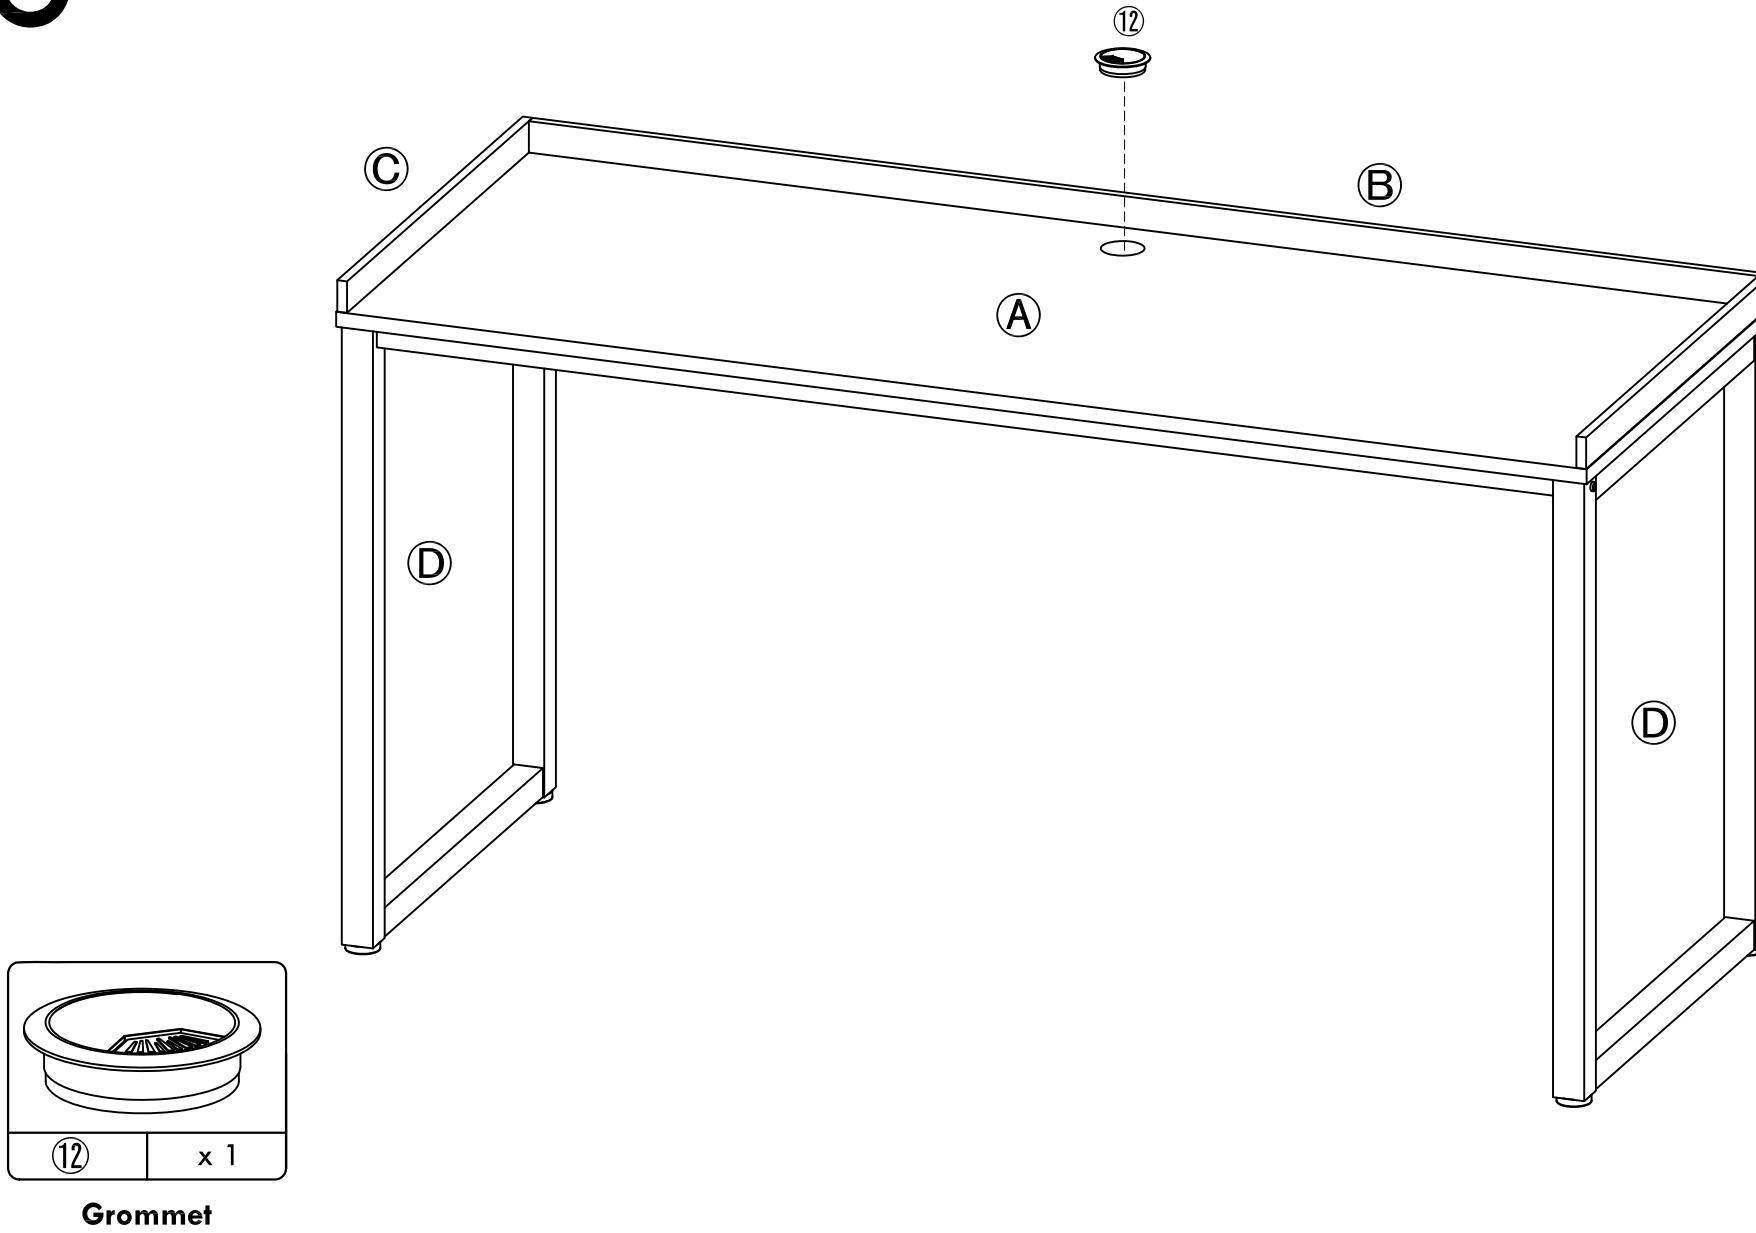

Grommet

7

Screw Cam Bolts ⑤ into Top Panel 2 (F) & Shelf Panel (G).
 Insert Wood Dowels ⑦ into Top Panel 2 (F) & Shelf Panel (G).



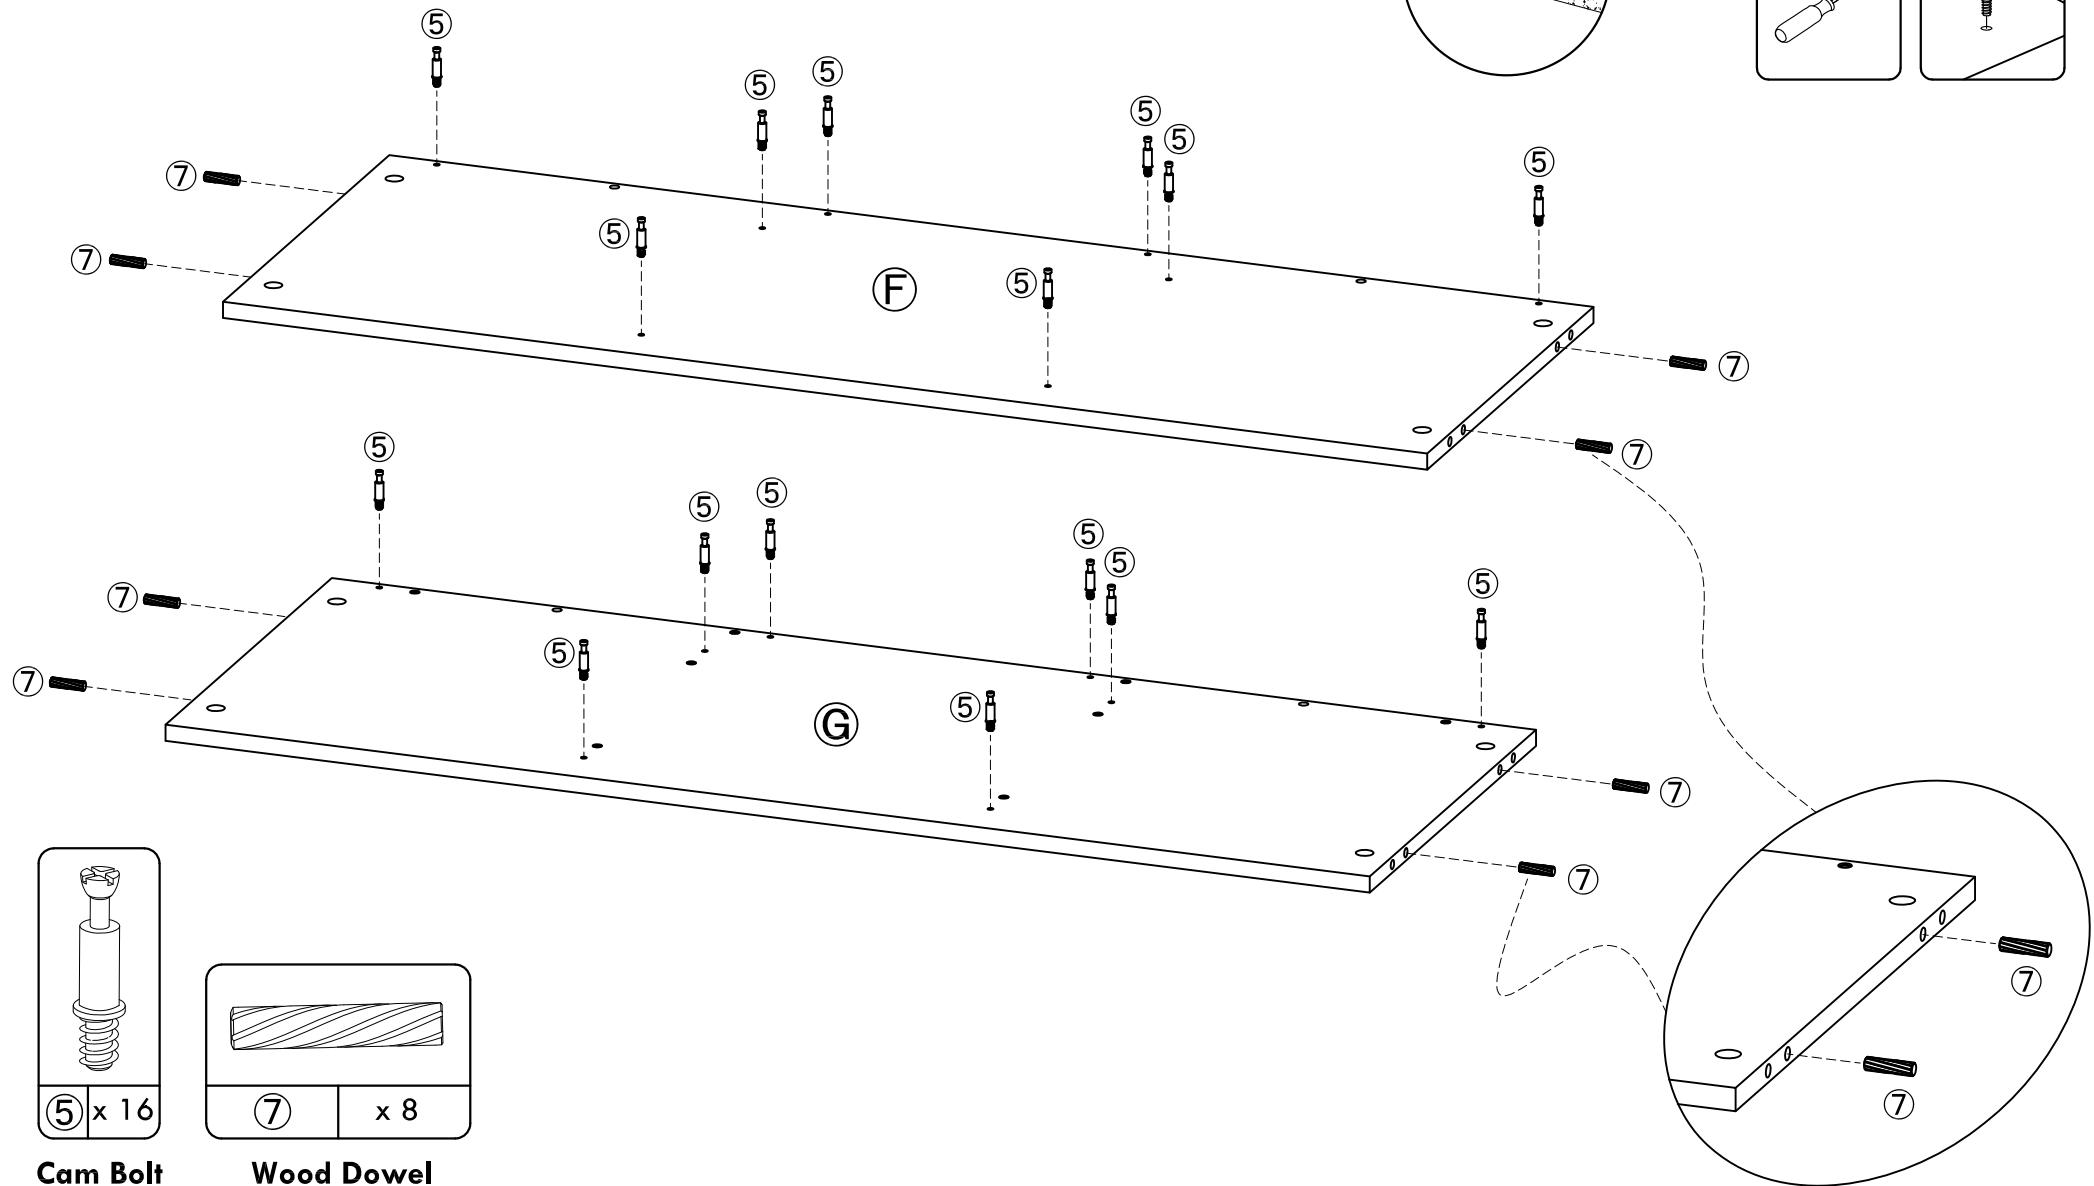


Cam Bolt



Wood Dowel

8

Insert Wood Dowels ⑦ into Bottom Panel (H) & Partition Boards (J).

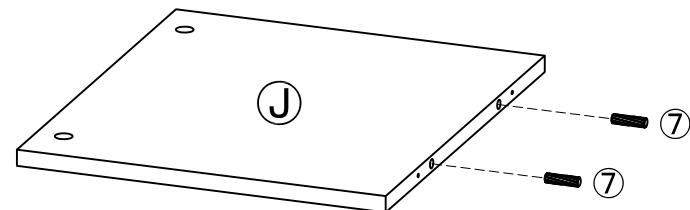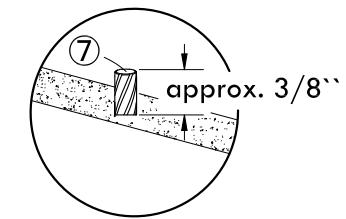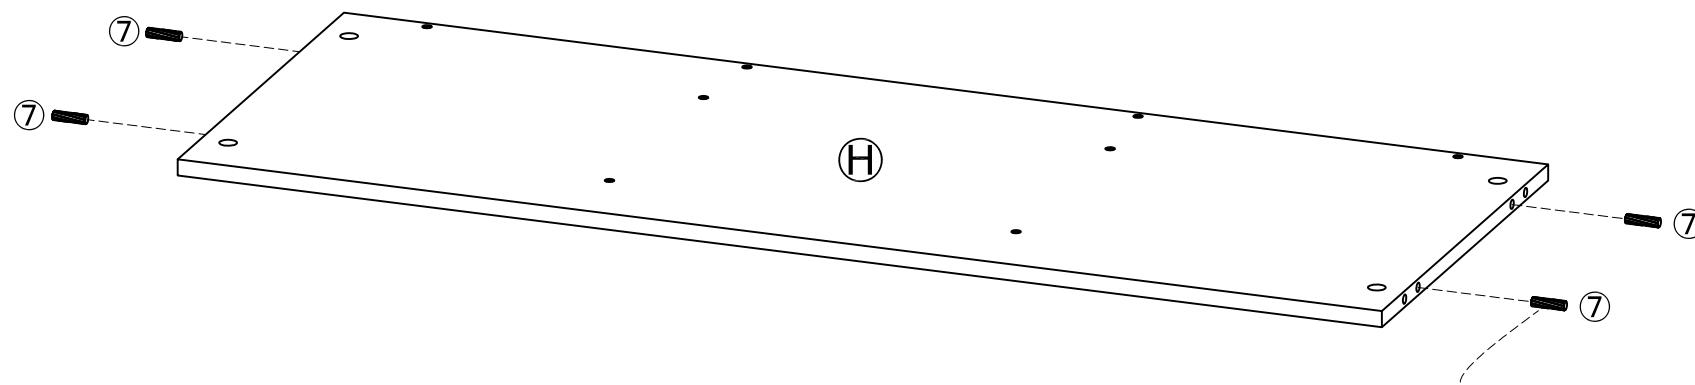




x 4

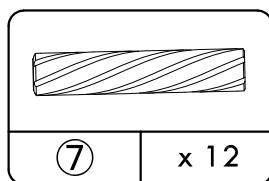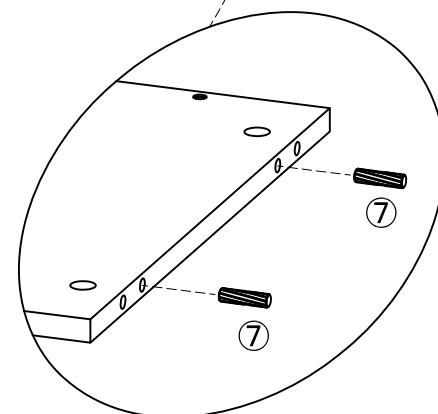



Wood Dowel

9


Screw Cam Bolts ⑤ into Side Panels (I).
Insert Wood Dowels ⑦ into Back Panels (K).

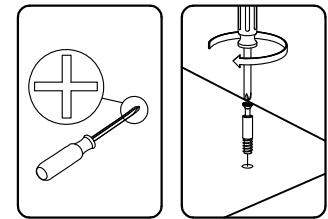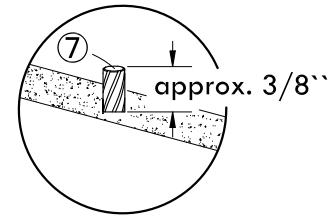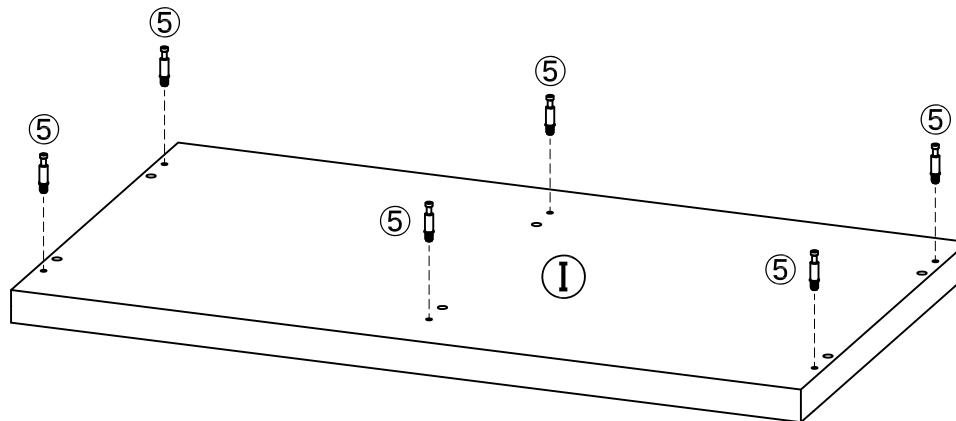

x 2

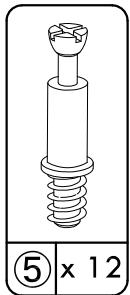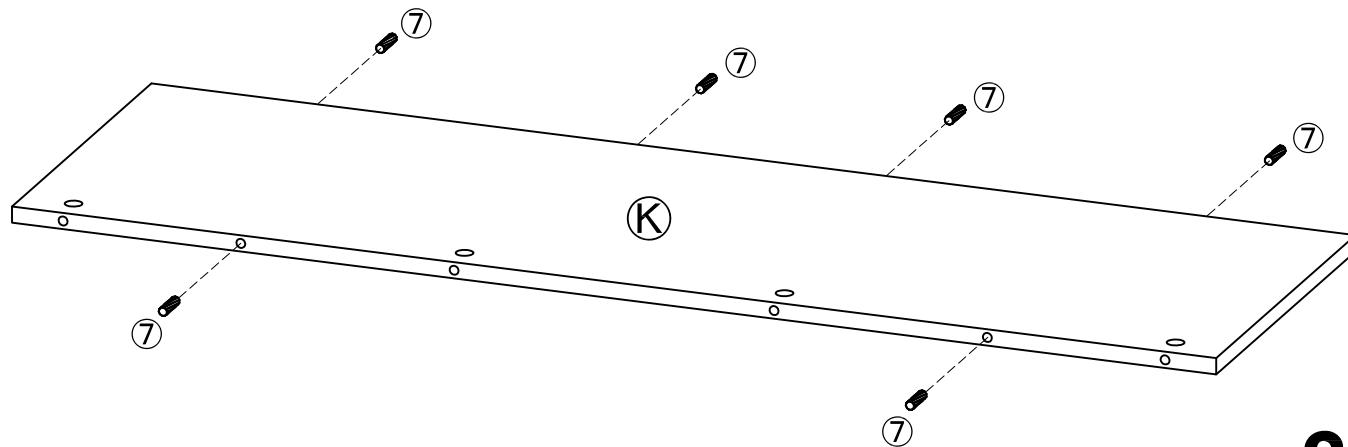

Cam Bolt

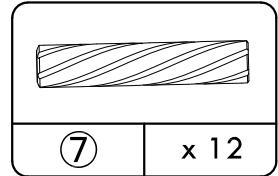




Wood Dowel

10

Connect Top Panel 2 (F) to one of the Back Panels (K).


Insert Cam Locks ⑥ into Back Panel (K).

Using a flat head screwdriver, turn each Cam Lock ⑥ 180° clockwise.

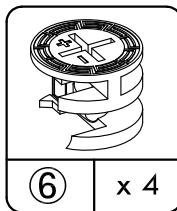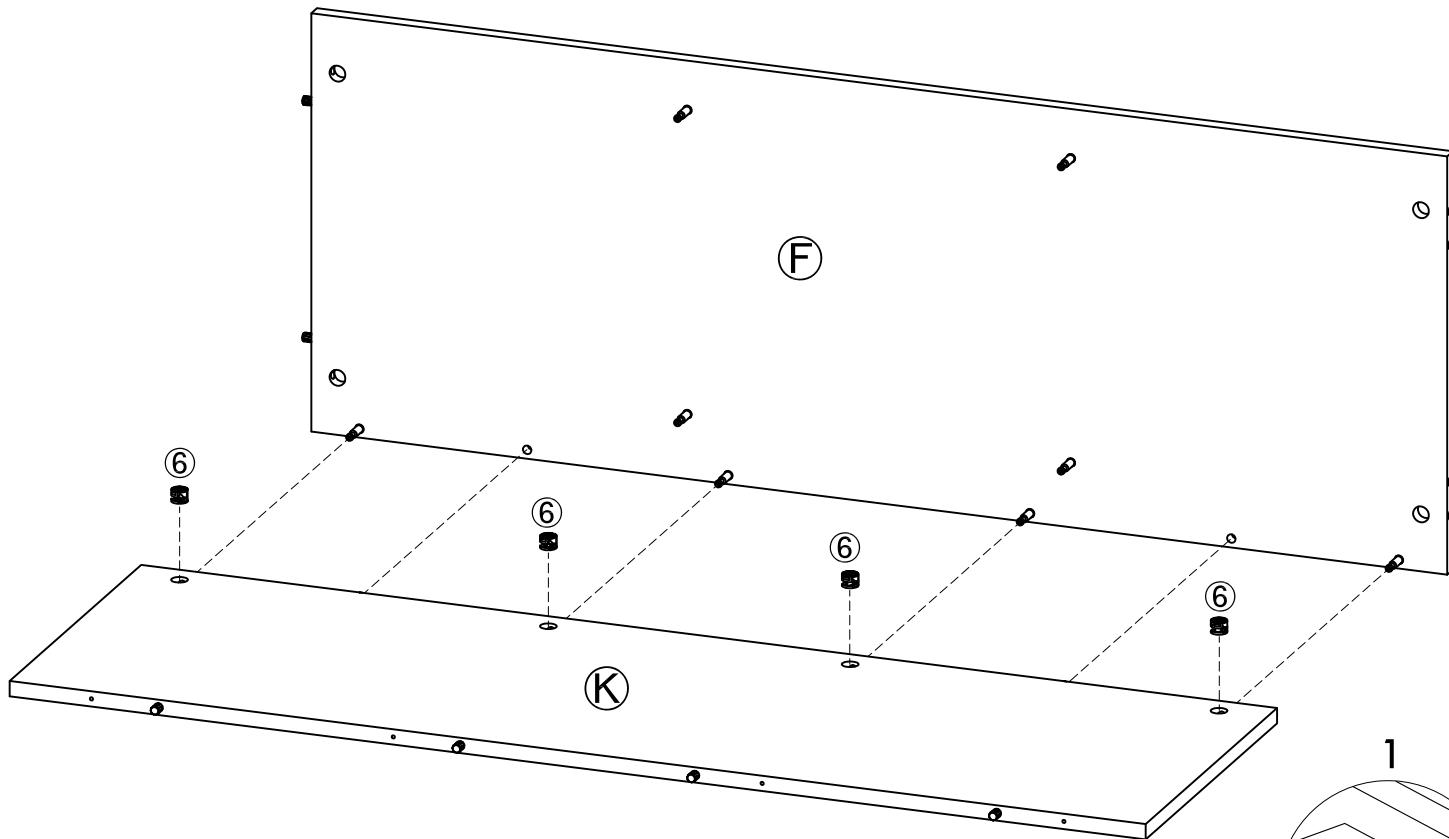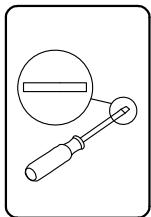


Cam Lock

1

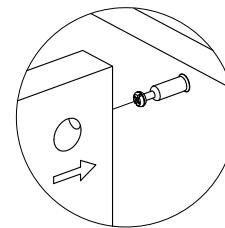


INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL

2 PLUS-MINUS

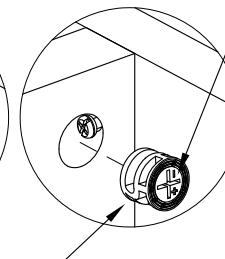

3 TIGHTEN

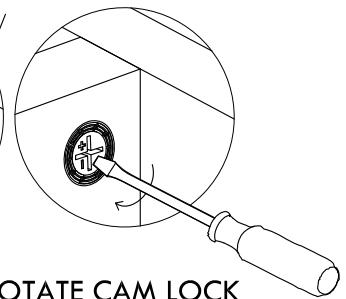




ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

11

Connect two Partition Boards (J) to Top Panel 2 (F).


Insert Cam Locks ⑥ into Partition Boards (J).

Using a flat head screwdriver, turn each Cam Lock ⑥ 180° clockwise.

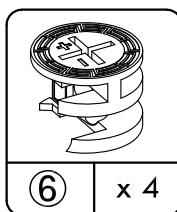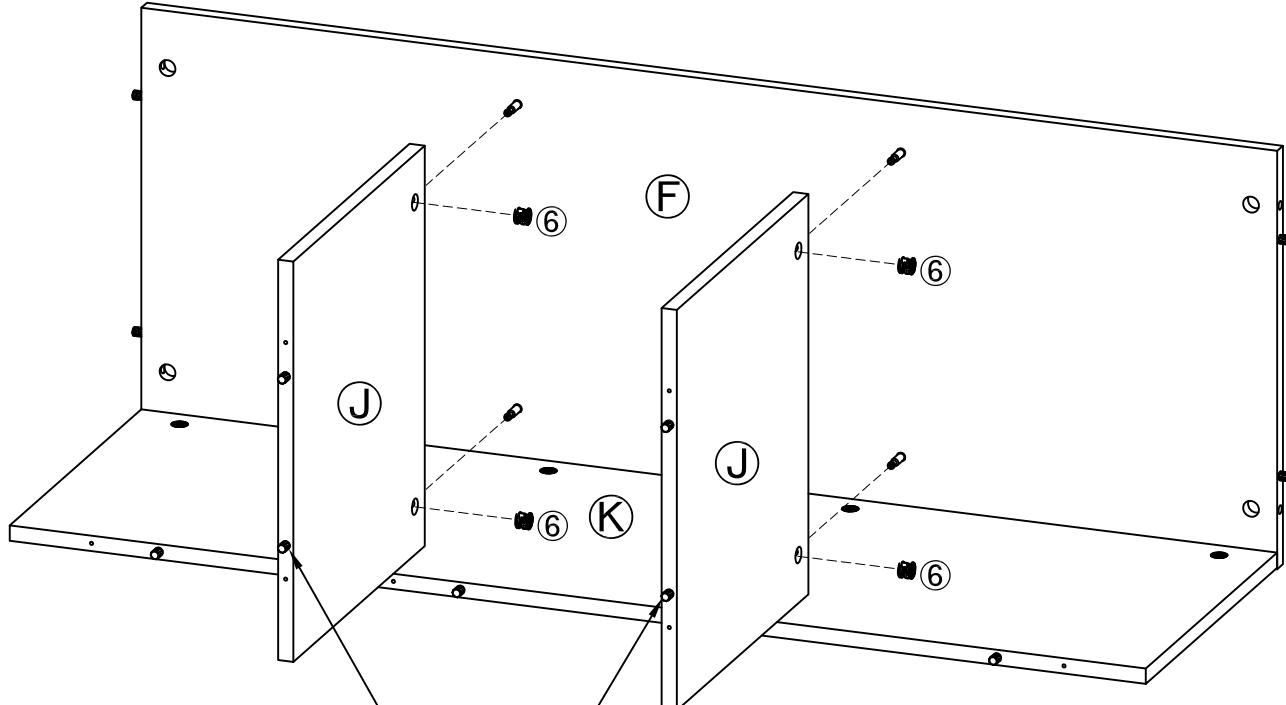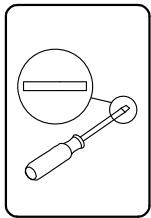


Cam Lock

1

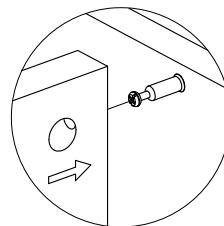


INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL

2 PLUS-MINUS

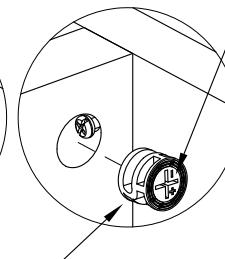




3 TIGHTEN

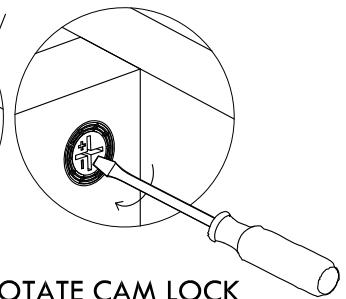

ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

12

Use Screws ⑨ to attach Shelf Panel (G) to the structure.

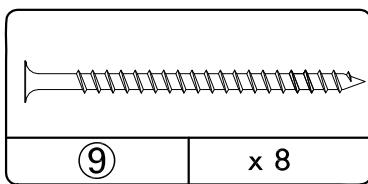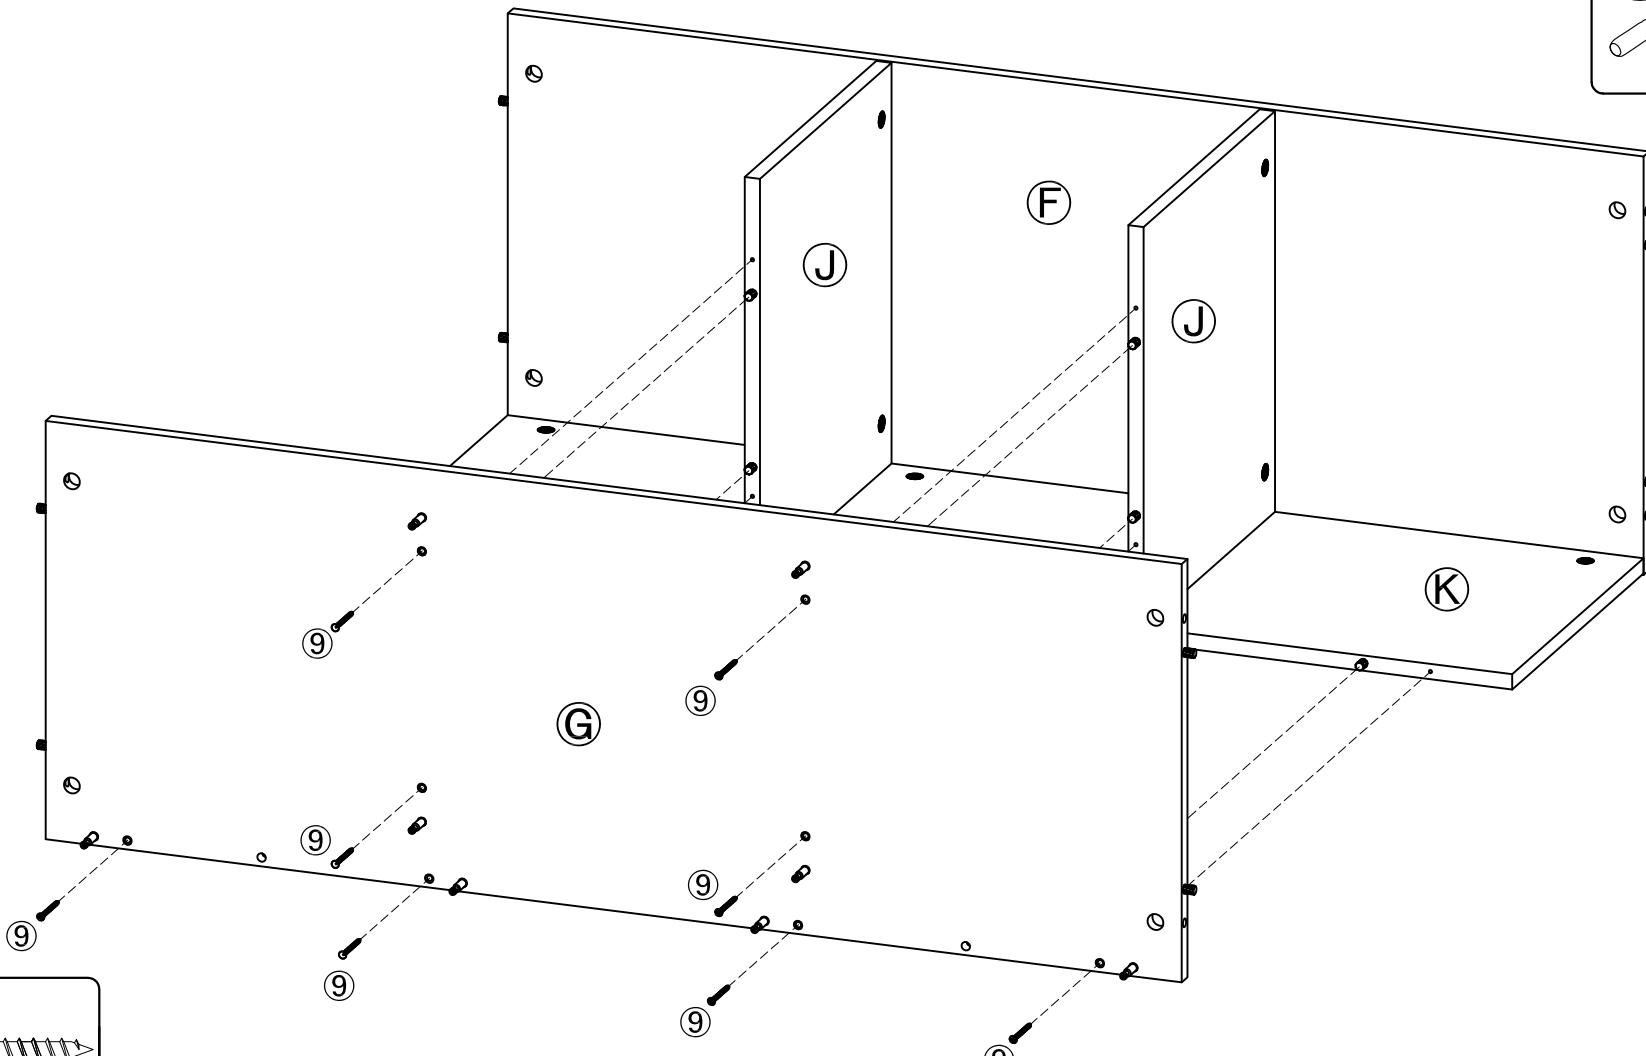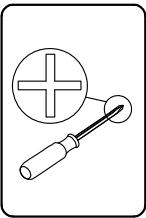



Screw

13

Connect remaining Back Panel (K) to Shelf Panel (G).

Insert Cam Locks ⑥ into Back Panel (K).

Using a flat head screwdriver, turn each Cam Lock ⑥ 180° clockwise.

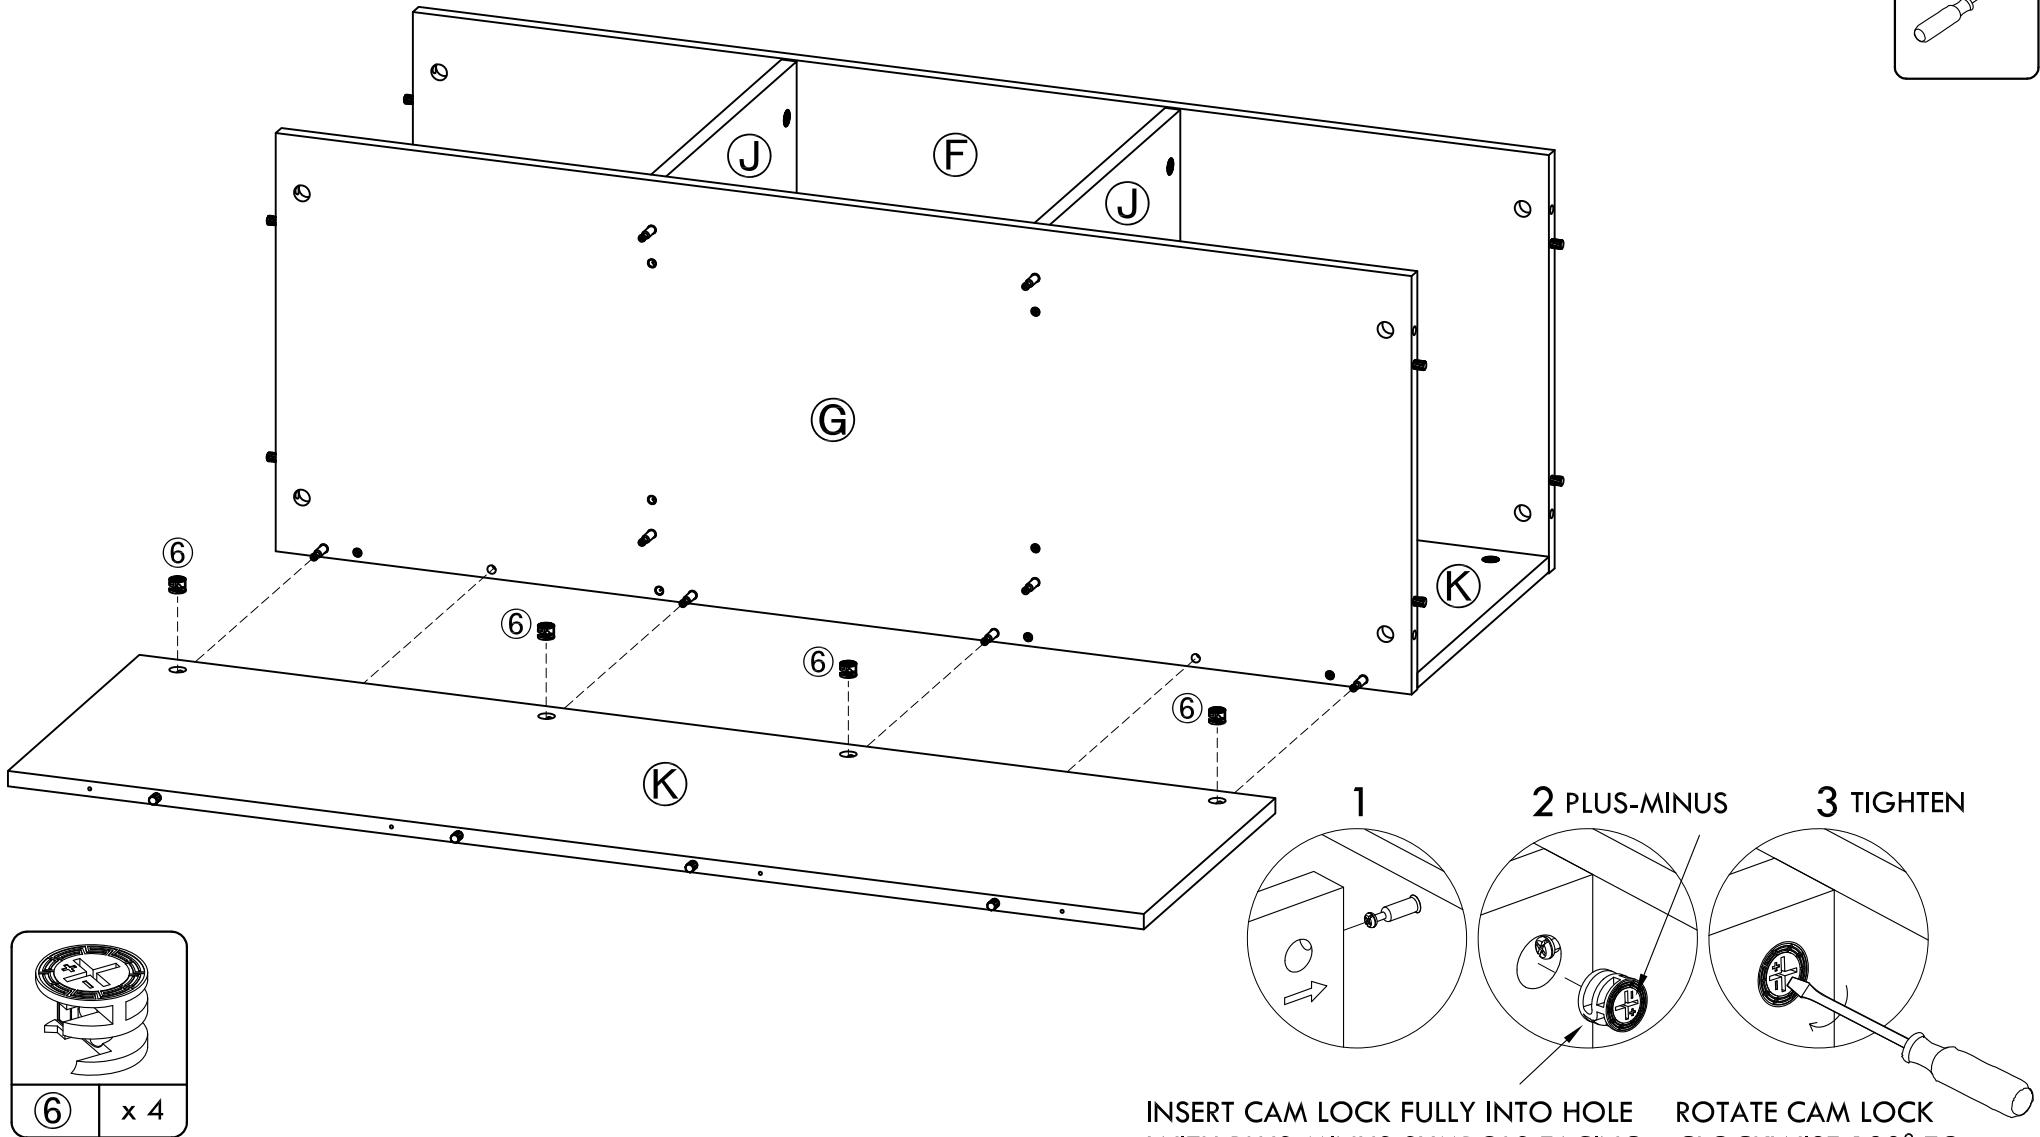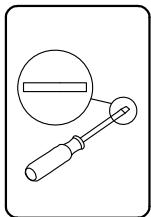

INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL



ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

14


Connect remaining Partition Boards (J) to Shelf Panel (G).

Insert Cam Locks ⑥ into Partition Boards (J).


Using a flat head screwdriver, turn each Cam Lock ⑥ 180° clockwise.

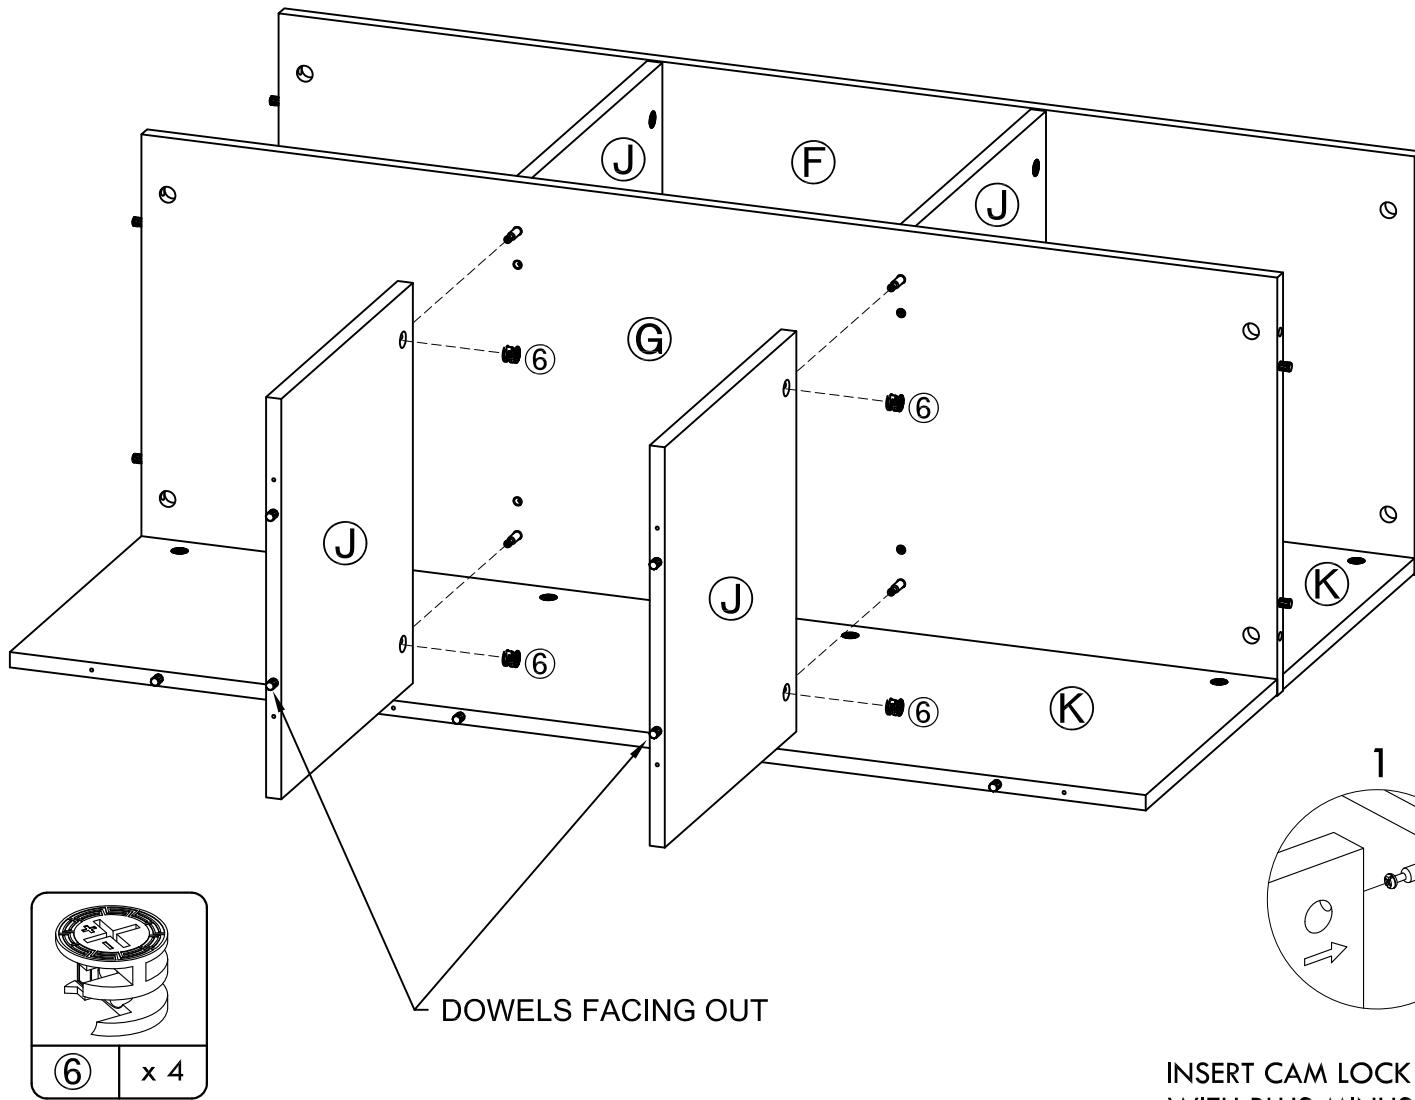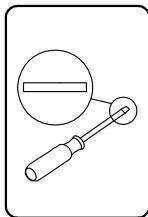


1

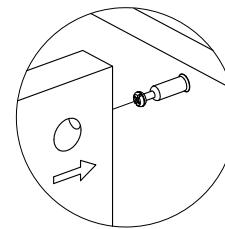

2 PLUS-MINUS

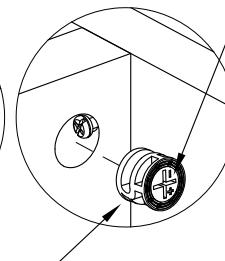

3 TIGHTEN


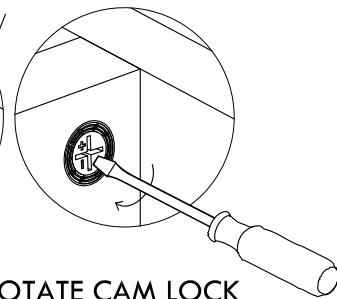


INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL

ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

15

Use Screws ⑨ to attach Bottom Panel (H) to the structure.

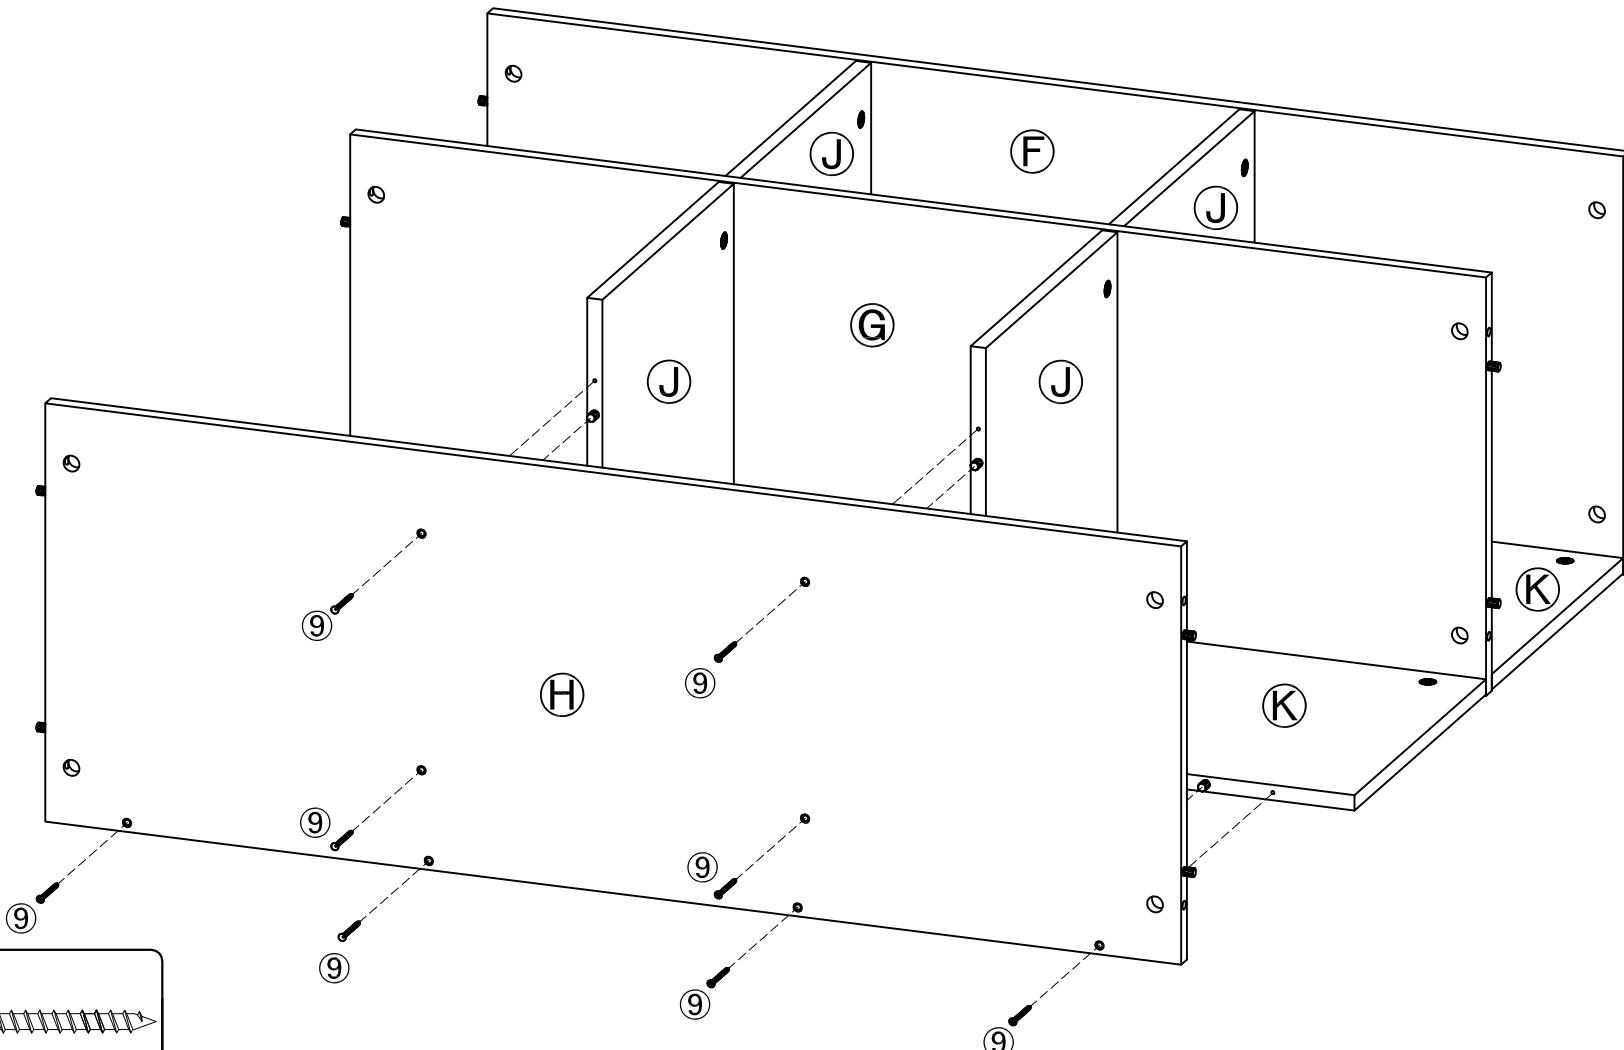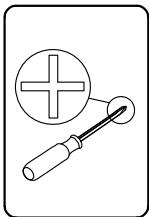




Screw

16

Connect Side Panel (I) to the structure.


Insert Cam Locks ⑥ into (F), (G) & (H) panels.

Using a flat head screwdriver, turn each Cam Lock ⑥ 180° clockwise.

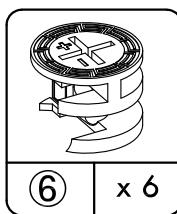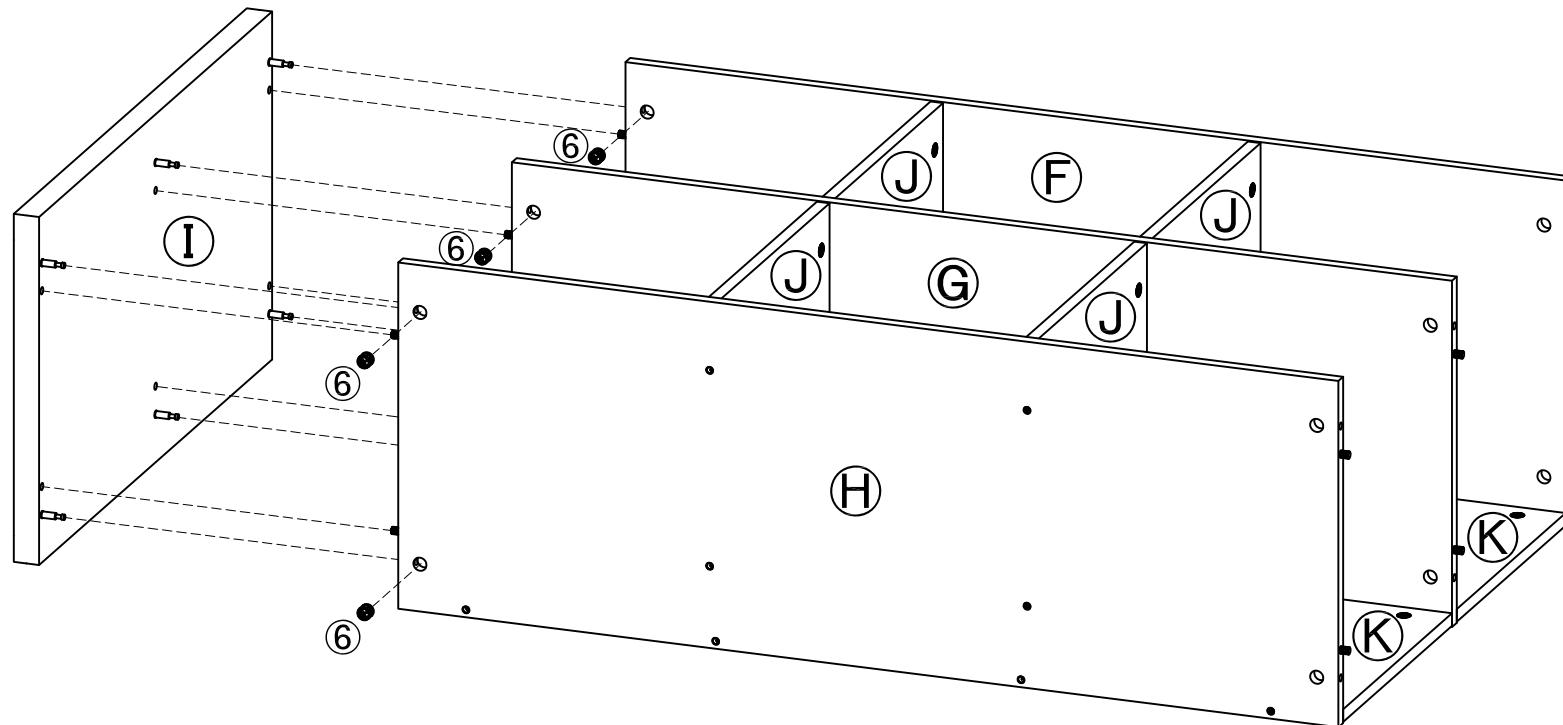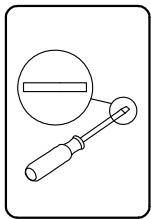


Cam Lock

1

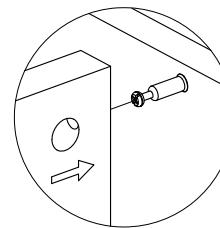

INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL

2 PLUS-MINUS

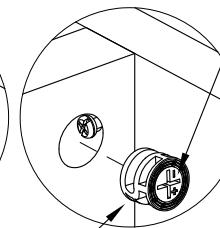




ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

17


Connect Side Panel (I) to the structure.

Insert Cam Locks ⑥ into (F), (G) & (H) panels.


Using a flat head screwdriver, turn each Cam Lock ⑥ 180° clockwise.

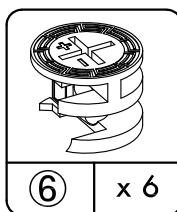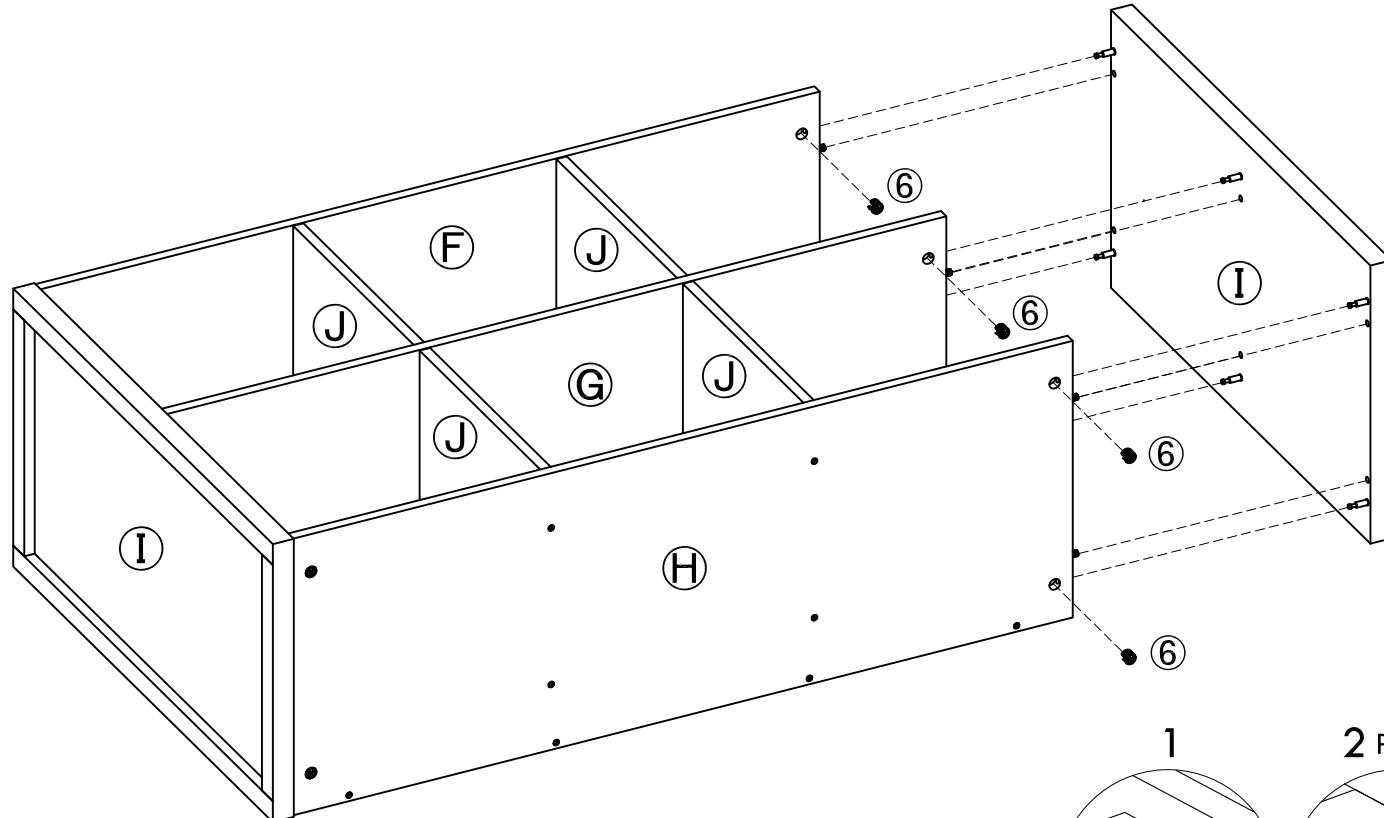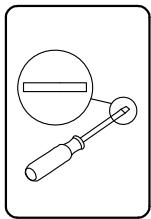


Cam Lock

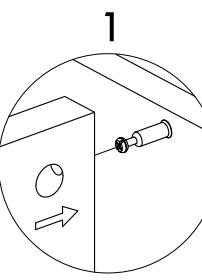

INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL

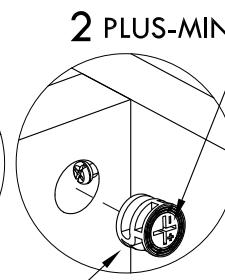

2 PLUS-MINUS

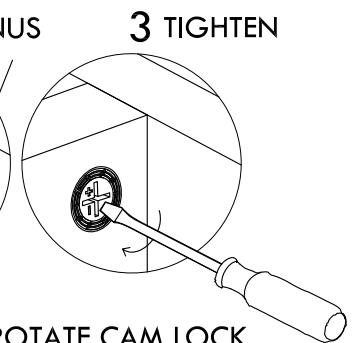


3 TIGHTEN

ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

18

Hammer Floor Protectors ⑩ into bottom of Side Panels (I).
Use Caps ⑪ to cover exposed cam locks in Partition Boards (J).

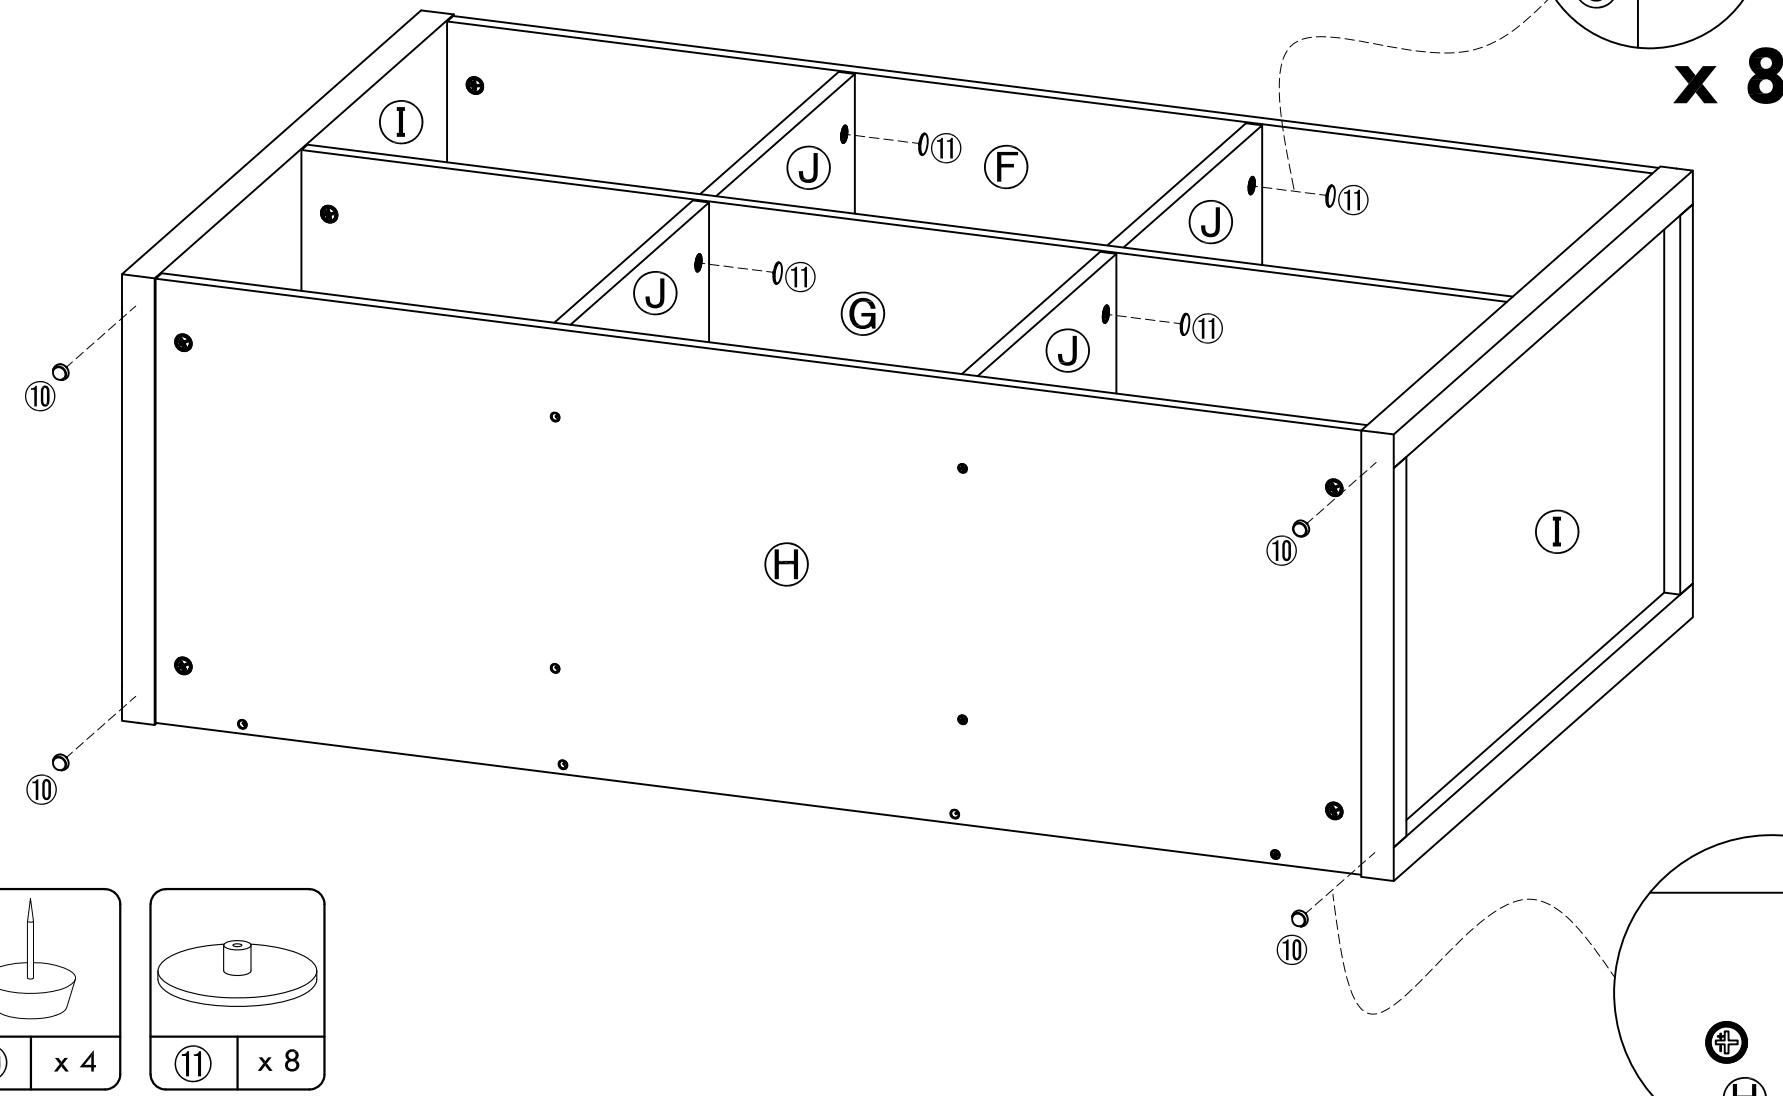


Floor Protector

Cap

**CONGRATULATIONS, YOUR UNIT IS COMPLETE,
PLEASE ENJOY AND BE SURE TO TELL US ABOUT YOUR EXPERIENCE!**

**TO CLEAN YOUR DESK,
WIPE WITH A SOFT DAMP CLOTH**

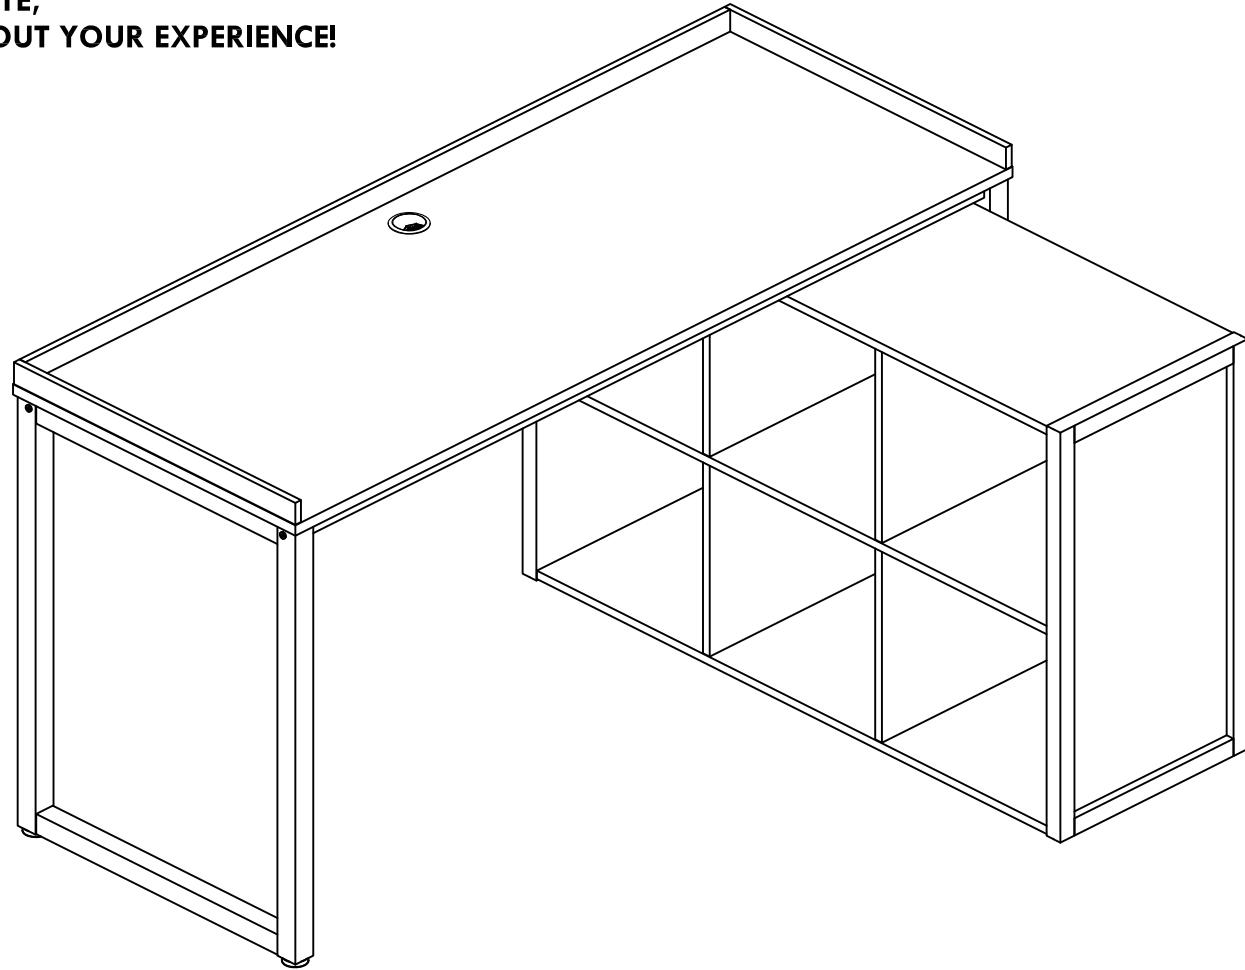

Quality Guarantee

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to (1) year from date of purchase.

This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

**Please call for replacement parts or assistance: 1-800-729-1569
Monday - Friday 9:00 am - 5:00 pm EST**