




ASSEMBLY INSTRUCTIONS

Your Zone Kids Bin Storage And Bookcase

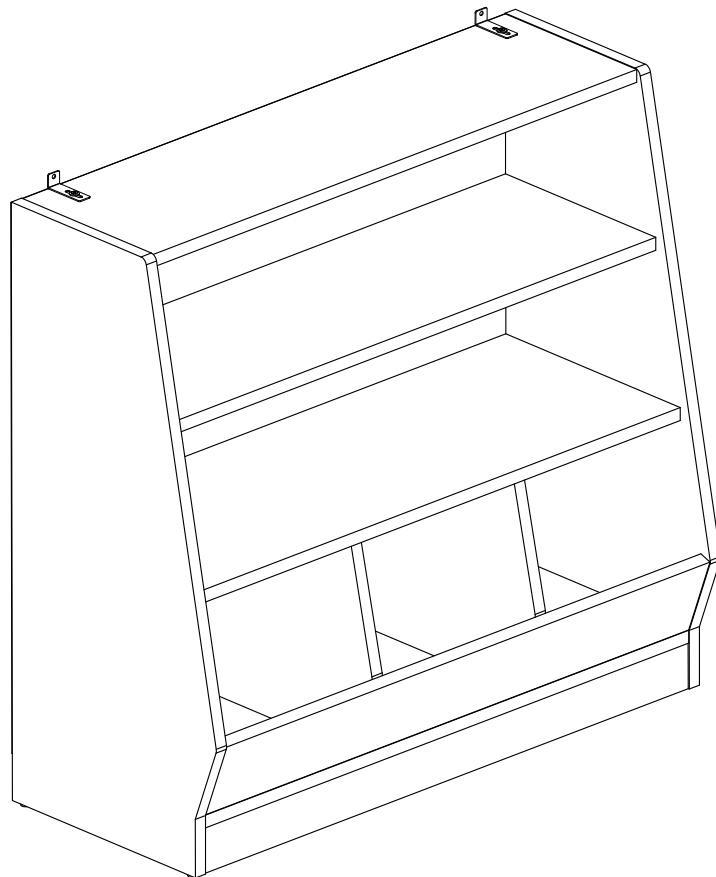

For product assistance &
missing or replacement parts:

WE CAN HELP
1-800-729-1569
Monday-Friday 9am-5pm EST
USA only

**THIS GUIDE CONTAINS
IMPORTANT SAFETY
INFORMATION**

PLEASE READ AND KEEP
FOR FUTURE REFERENCE.

Find more at Walmart.com

Model No. YZ5336278612005 Lot Number: _____
Date Of Purchase: ____/____/____

Contents & Information


CONTENTS & INFORMATION	2
OVERVIEW	3
SAFETY PRECAUTIONS	3
CAM FASTENING SYSTEM INSTRUCTIONS	4
MODEL DESCRIPTION	5
Parts List	5
Parts Diagram	5
Setup	6
Tools Needed	6
Hardware	6
ASSEMBLY	7-20
SPECIFICATIONS	21

FEATURES

- Features two bookshelves and three storage bin compartments.
- Top panel can support up to 24.2 lbs.
- Shelf 1 can support up to 22 lbs.
- Shelf 2 can support up to 33 lbs.
- Bottom panel can support up to 33 lbs.
- Assembled dimensions: 35.04" W x 15.00" D x 32.99" H.
- Assembled weight: 56.32 lbs.
- Materials: 96% particle board, 3% paperboard, 1% iron.
- Finishes available: White (YZ19-D1-1009-13).

Overview

THIS PRODUCT MUST ALWAYS BE MOUNTED TO A WALL OR STUD FOR USE.

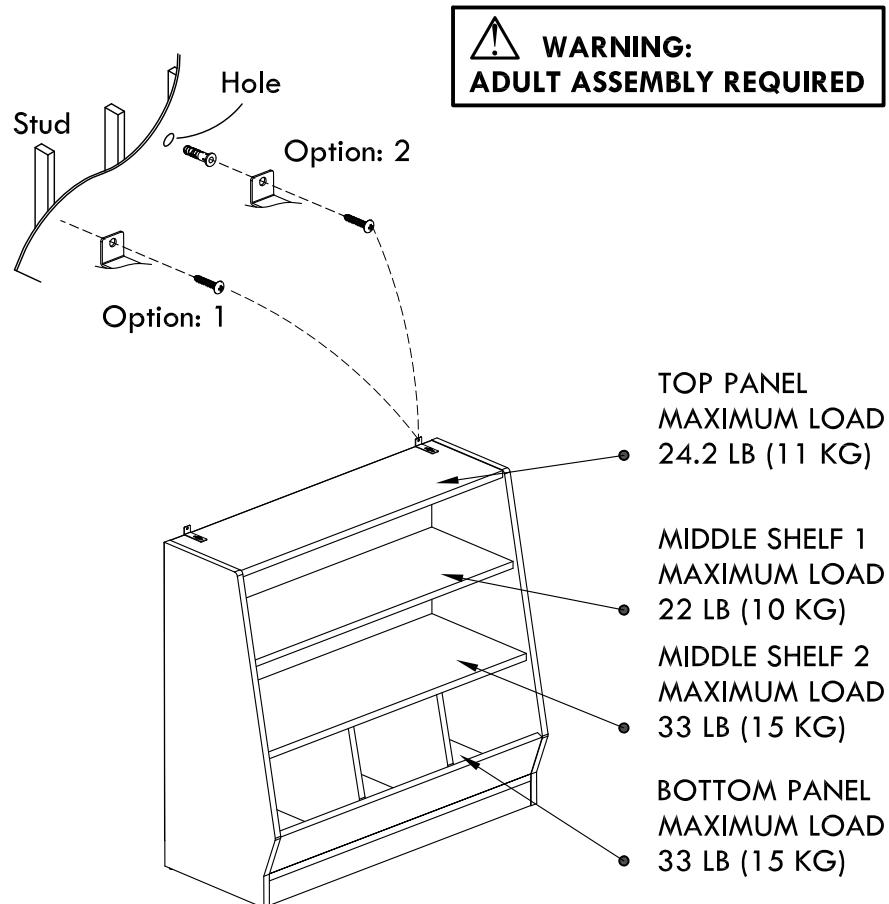

**DO NOT RETURN THE PRODUCT TO THE STORE.
INDIVIDUAL STORES DO NOT STOCK PARTS.
FOR MISSING OR DAMAGED PARTS CALL
1-800-729-1569.
PARTS WILL BE SHIPPED FREE OF CHARGE.**

**FOR PROMPT, RELIABLE SERVICE, PLEASE HAVE
YOUR ASSEMBLY MANUAL READY.**

**LOT NUMBER _____
DATE OF PURCHASE ____/____/____**


Safety Precautions

WARNING

- Read and understand all the steps carefully before starting.
- If each step is not followed in the correct order the assembly will be difficult and may result in damages.
- Work in a spacious area, preferably on a carpeted surface, near where the unit will be used.
- Make sure all the parts are included. Most boards are labeled with a removable sticker.
- Call our toll free number 1-800-729-1569 for assistance.
- Additional parts are available for a fee.
- This instruction book contains important safety information. Please keep it for future reference.
- **DO NOT ALLOW CHILDREN TO CLIMB OR PLAY ON THE UNIT.**
- Clean the unit with your favorite furniture polish and a soft cloth.
- Do not use harsh or abrasive cleaners.
- Move your new furniture carefully with two people.
- **NEVER PUSH, PULL OR DRAG THE UNIT.**
- Do not return the unit to the store.

Cam fastening system

CAUTION

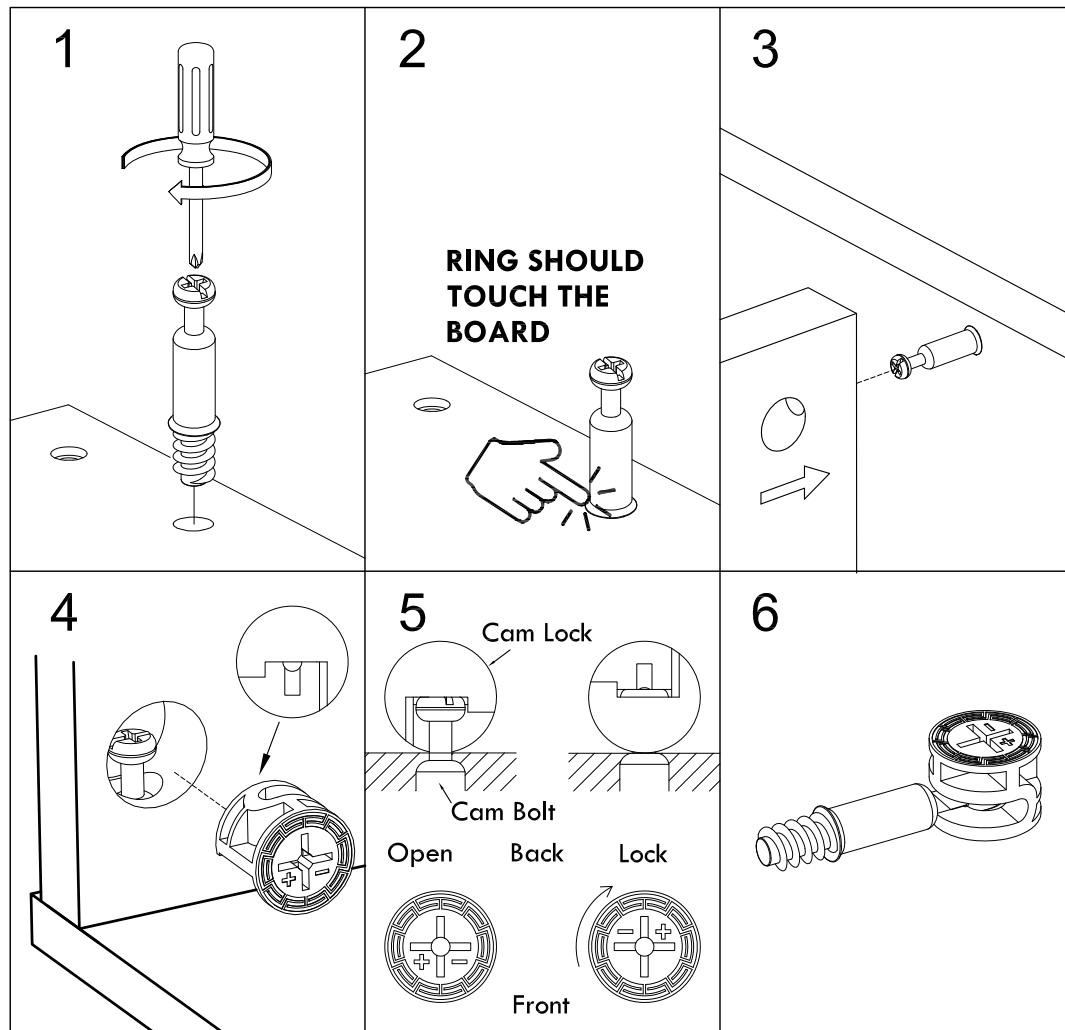

CAM FASTENING SYSTEM EXAMPLE


1. Screw the **cam bolt** into the predrilled panel. The screw should be tightened so no threads are visible.
2. The larger ring of the cam should touch the panel.
3. Connect the previously tightened cam bolt to the panel.
4. Insert the **cam lock** into the predrilled hole in the panel. The plus and minus signs should be facing the predrilled hole in the edge of panel.
5. Using a flat head screw driver, turn the **cam lock** halfway clockwise to secure the **cam bolt**.
6. **FAILURE TO PROPERLY SECURE THE CAM LOCK AND CAM BOLT COULD RESULT IN PRODUCT INSTABILITY AND FAILURE.**

Model Description


PARTS

Part	Description	Qty	Part	Description	Qty	Part	Description	Qty
A	Top Panel	1	E1	Left Side Panel	1	I	Kick Panel 2	1
B1	Middle Shelf 1	1	F1	Right Side Panel	1	J1	Back Panel	1
C	Middle Shelf 2	1	G	Partition Board	2			
D	Bottom Panel	1	H	Kick Panel 1	1			


PARTS DIAGRAM

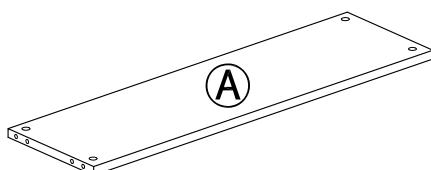


Top panel
(Qty: 1)

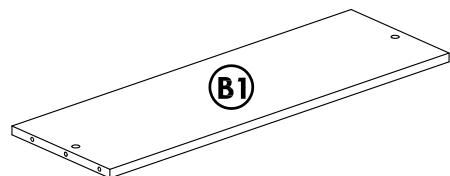


Middle shelf 1
(Qty: 1)

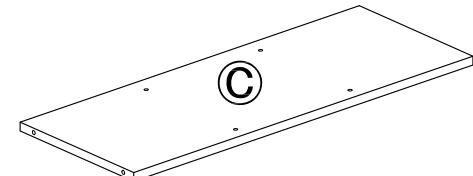


Middle shelf 2
(Qty: 1)

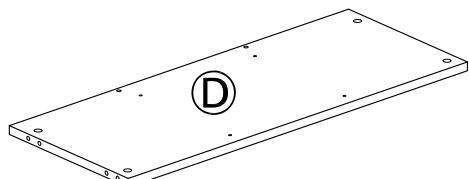


Bottom panel
(Qty: 1)

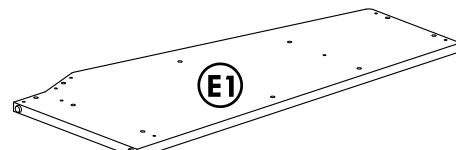


Left side panel
(Qty: 1)

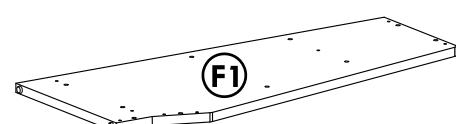


Right side panel
(Qty: 1)

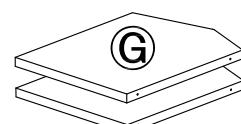


Partition board
(Qty: 2)

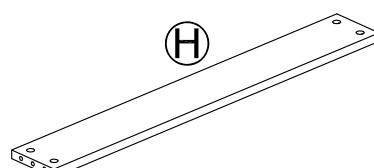

Kick panel 1
(Qty: 1)

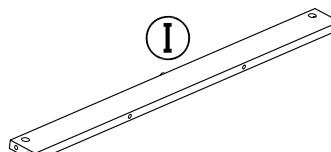

Kick panel 2
(Qty: 1)

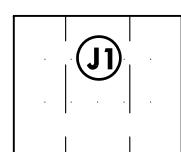

Back panel
(Qty: 1)

Model Description

SETUP




Hammer

TOOLS NEEDED



Phillips head screwdriver

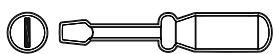


Flat head screwdriver

DO NOT USE POWER TOOLS TO ASSEMBLE YOUR FURNITURE. POWER TOOLS MAY RESULT IN DAMAGE TO THE UNIT

HARDWARE




Part	Description	Picture	Qty
1	Cam Lock		16
2	Cam Bolt		16
3	Wood Dowel		26+1 Extra
4	Screw		4
5	Nail		34+1 Extra
6	Wall Attachment Kit		2
7	Nail Holder		1

PARTS DIAGRAM

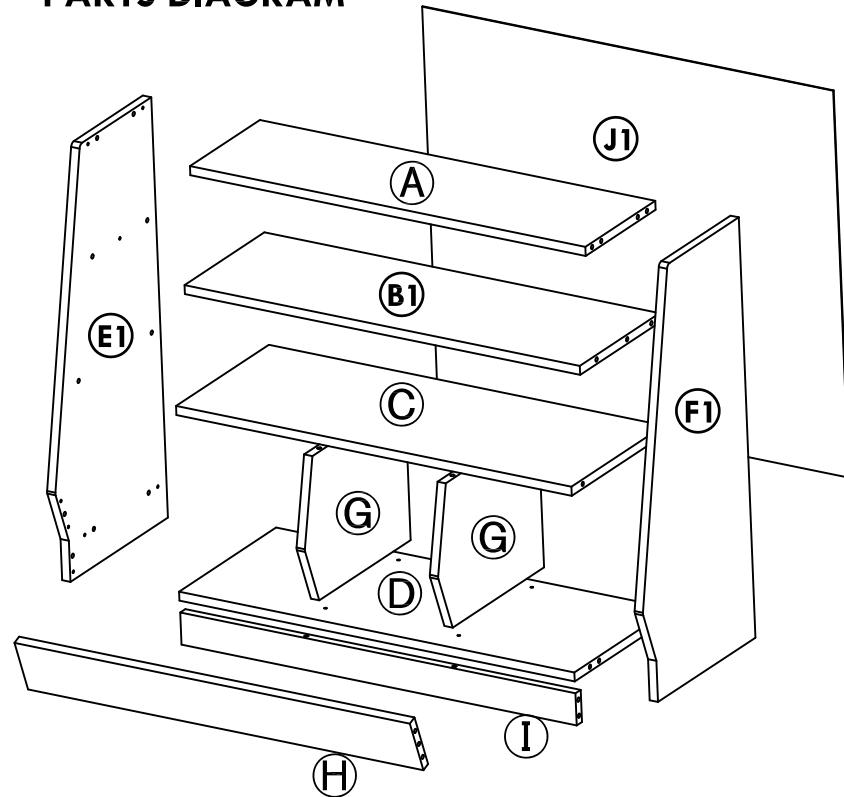



Assembly

1. Insert Wood Dowels (3) Into (A), (D), (H) & (I) Panels.

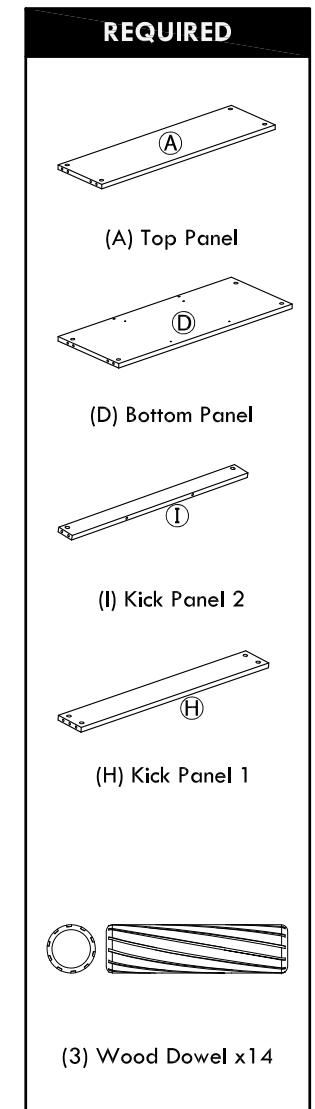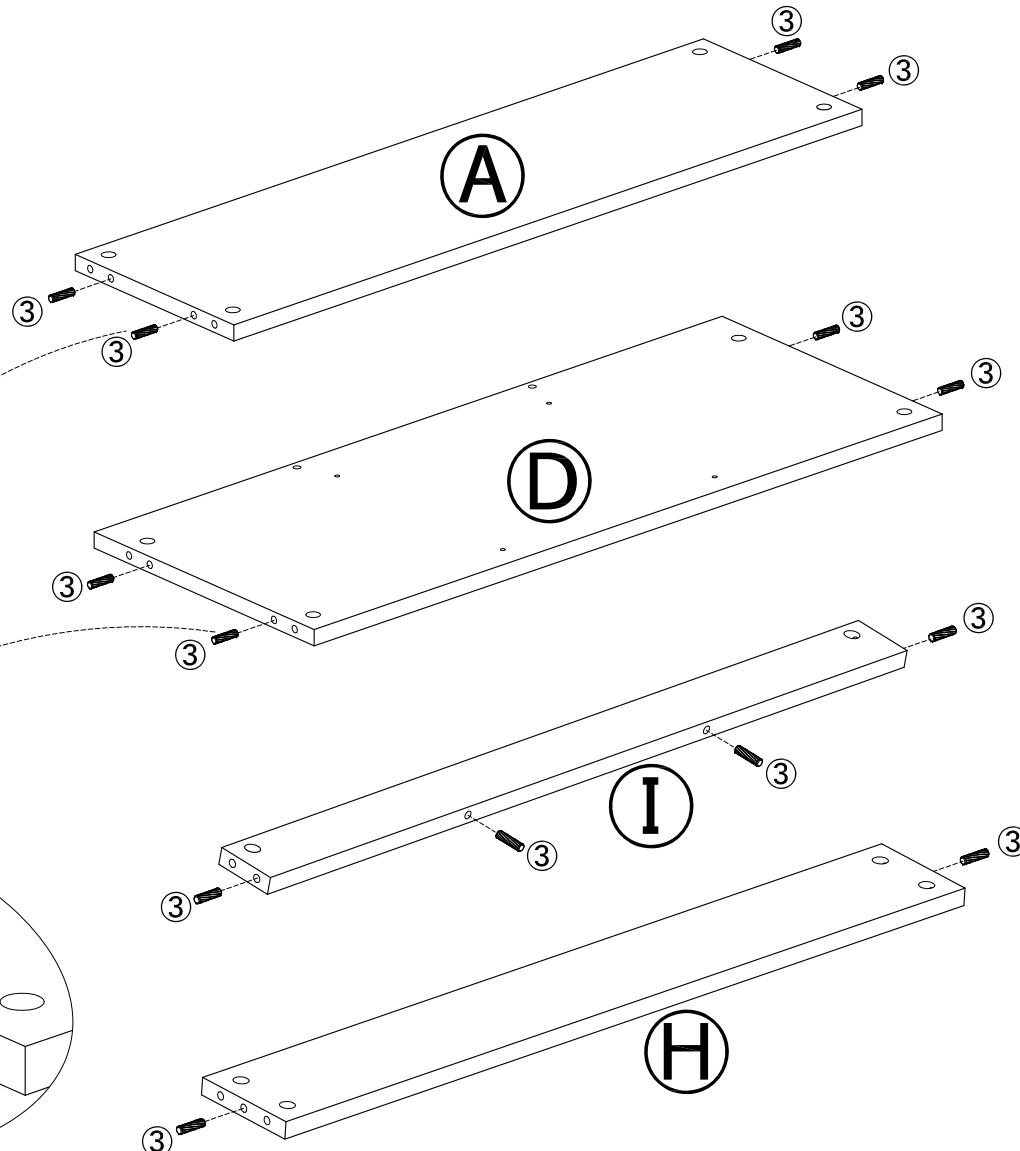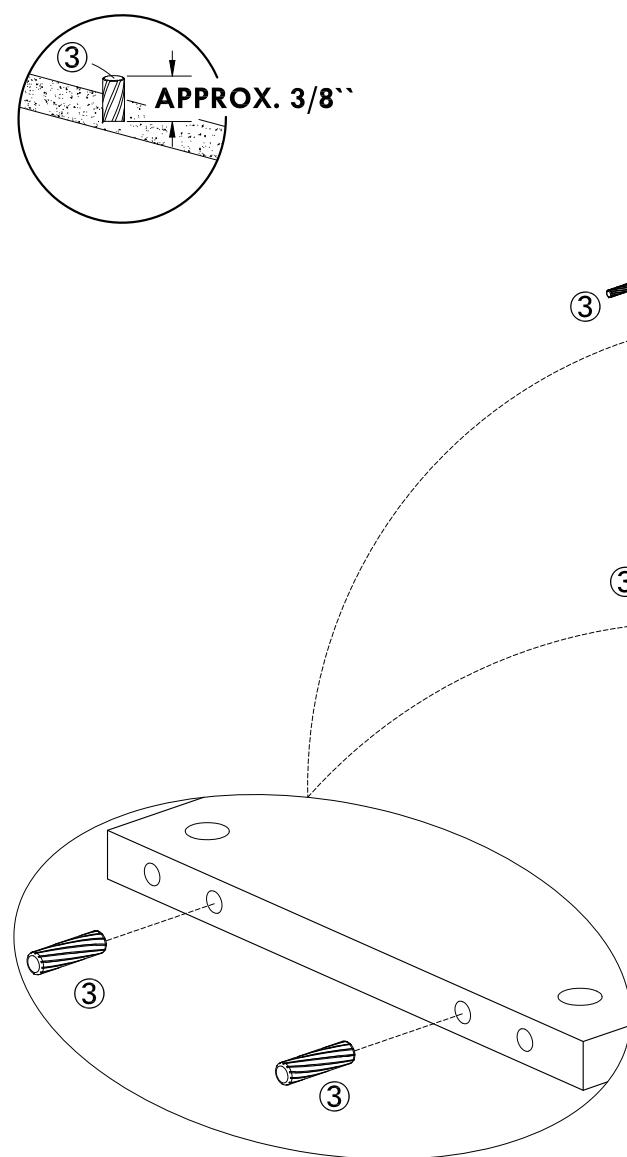

Assembly

2. Insert Wood Dowels (3) into (B1), (C) & (G) Panels.

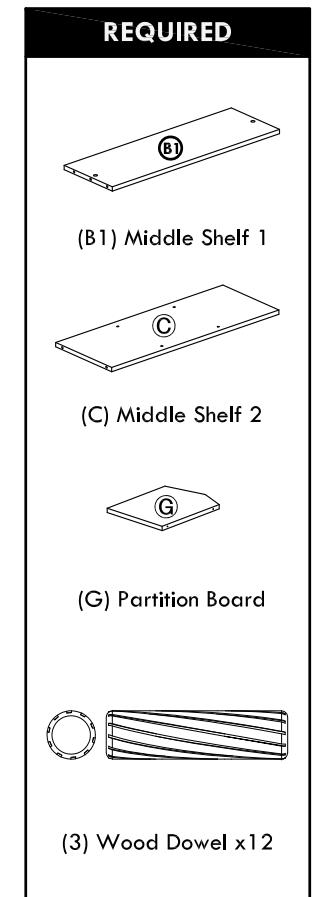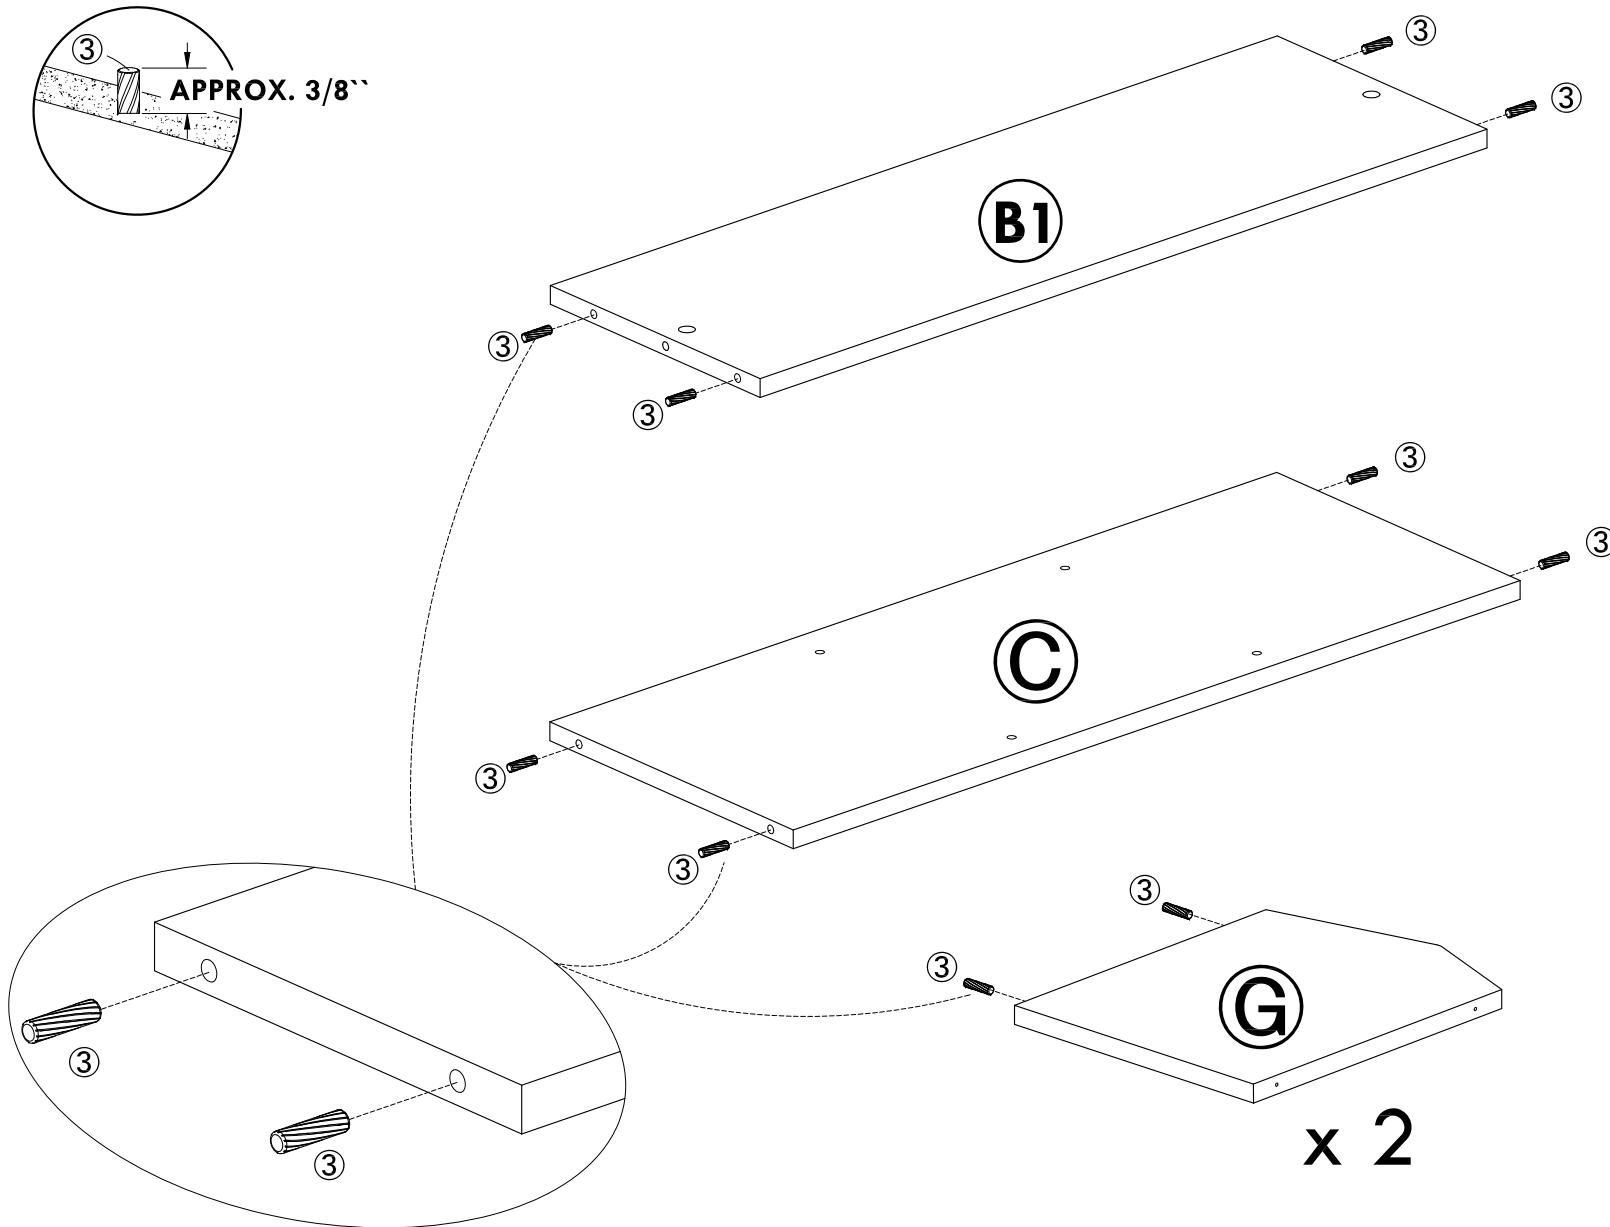


Assembly

3. Screw **CAM BOLTS** (2) into **(E1)** & **(F1)** Panels.




PHILLIPS
SCREWDRIVER


REQUIRED

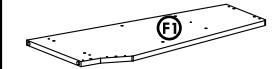



(F1) Right Side Panel

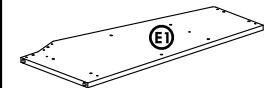

(E1) Left Side Panel

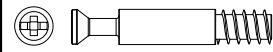

(2) Cam Bolt x16

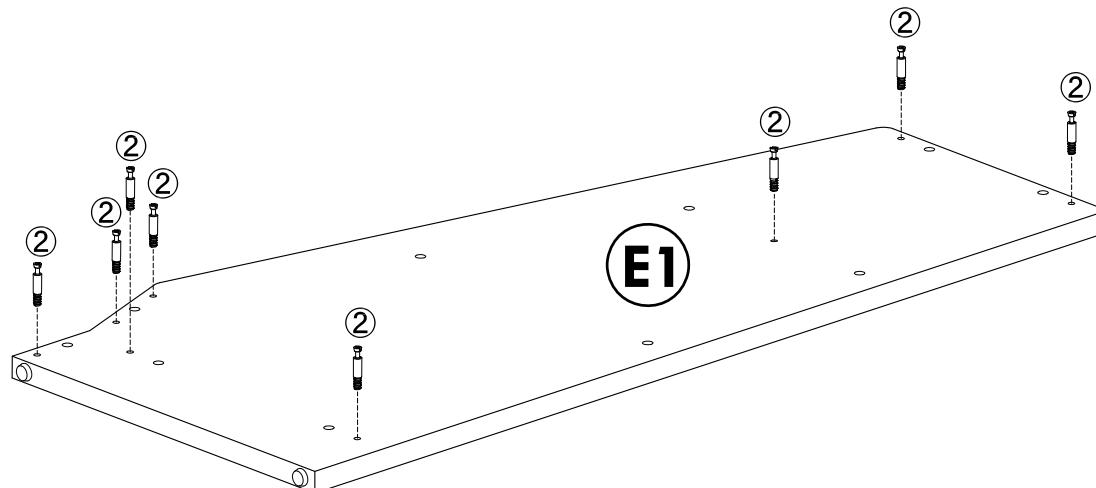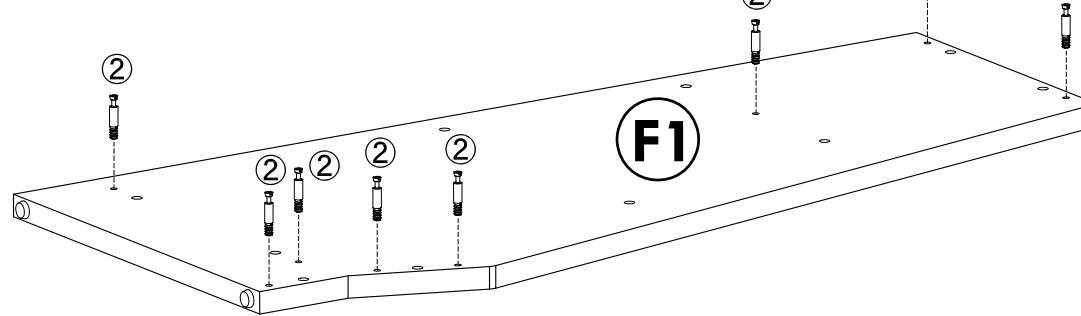

Assembly

4. Connect Top Panel (A) to Right Side Panel (F1).


Insert **Cam Locks** (1) into **Top Panel (A)**.

Using a flat head screwdriver, turn each **Cam Lock** (1) 180° clockwise.




FLAT HEAD
SCREWDRIVER

REQUIRED

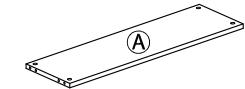



(A) Top Panel

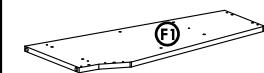

(F1) Right Side Panel



(1) Cam Lock x2

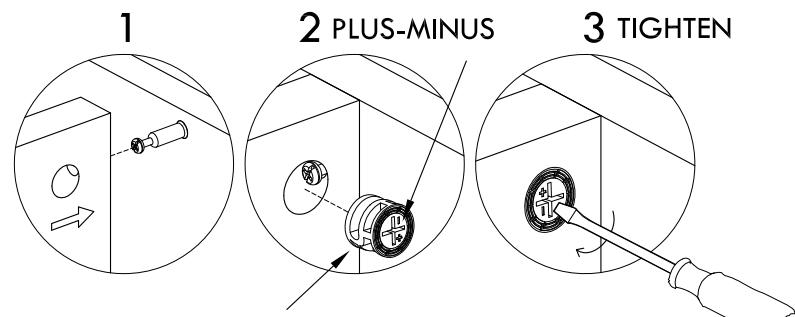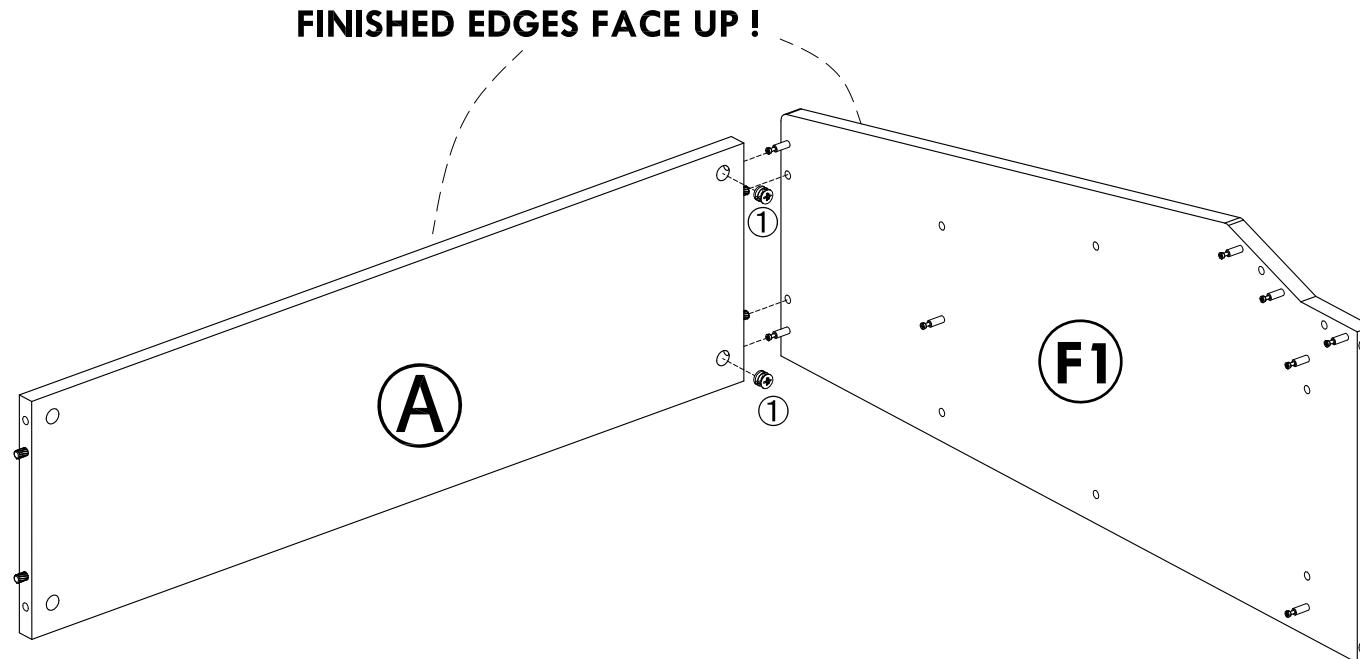

1
INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL


2 PLUS-MINUS
ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

Assembly

5. Connect Middle Shelf (B1) to Right Side Panel (F1).


Insert **Cam Locks (1)** into **Middle Shelf (B1)**.

Using a flat head screwdriver, turn each **Cam Locks (1)** 180° clockwise.

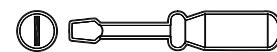

FLAT HEAD
SCREWDRIVER

REQUIRED


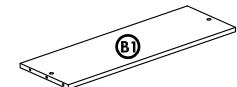


(B1) Middle Shelf 1



(1) Cam Lock x1

FINISHED EDGES FACE UP !

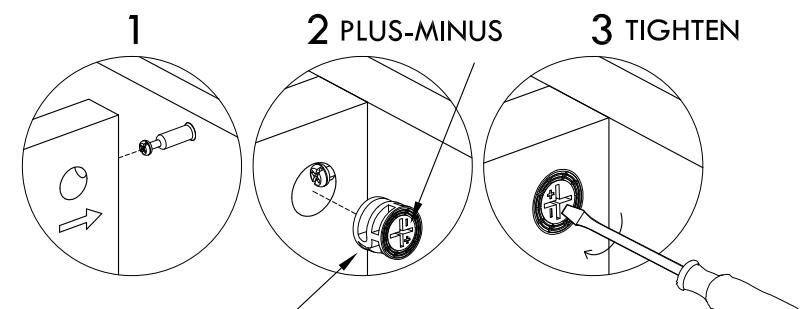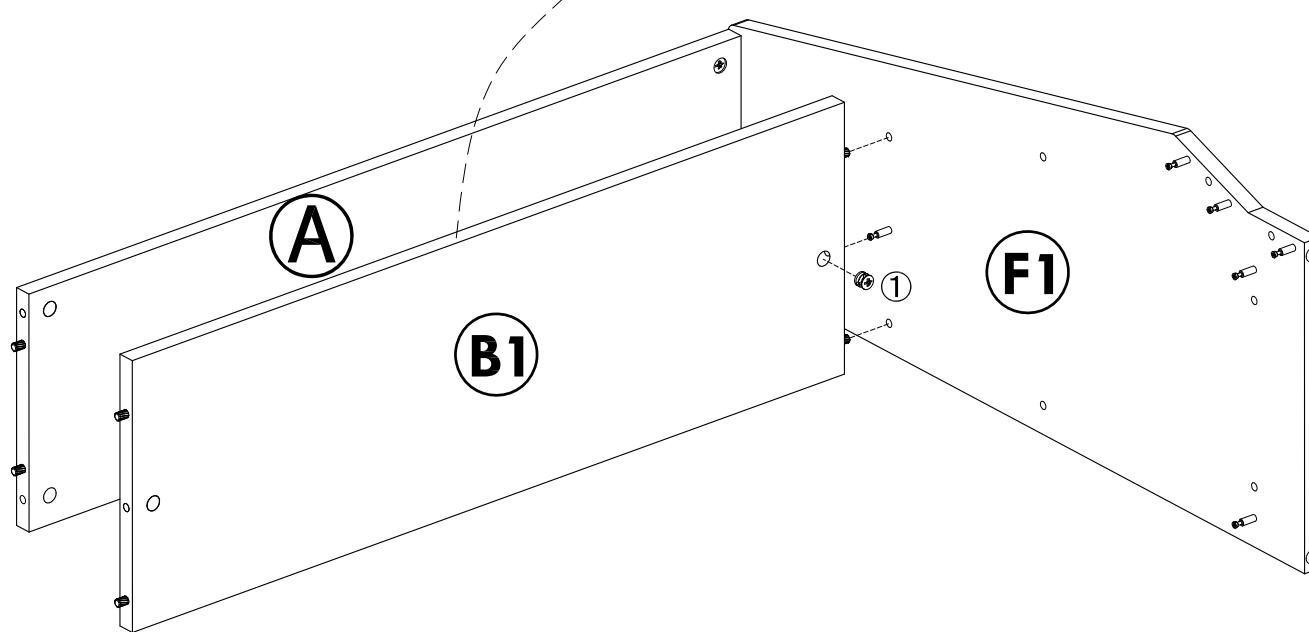



1
INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL

2 PLUS-MINUS
ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

Assembly

6. Connect Middle Shelf (C) to Right Side Panel (F1).


FINISHED EDGES FACE UP !

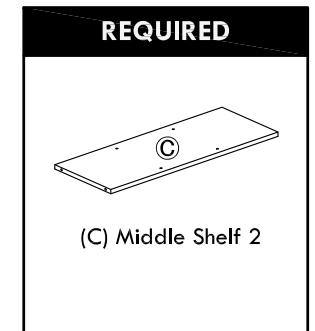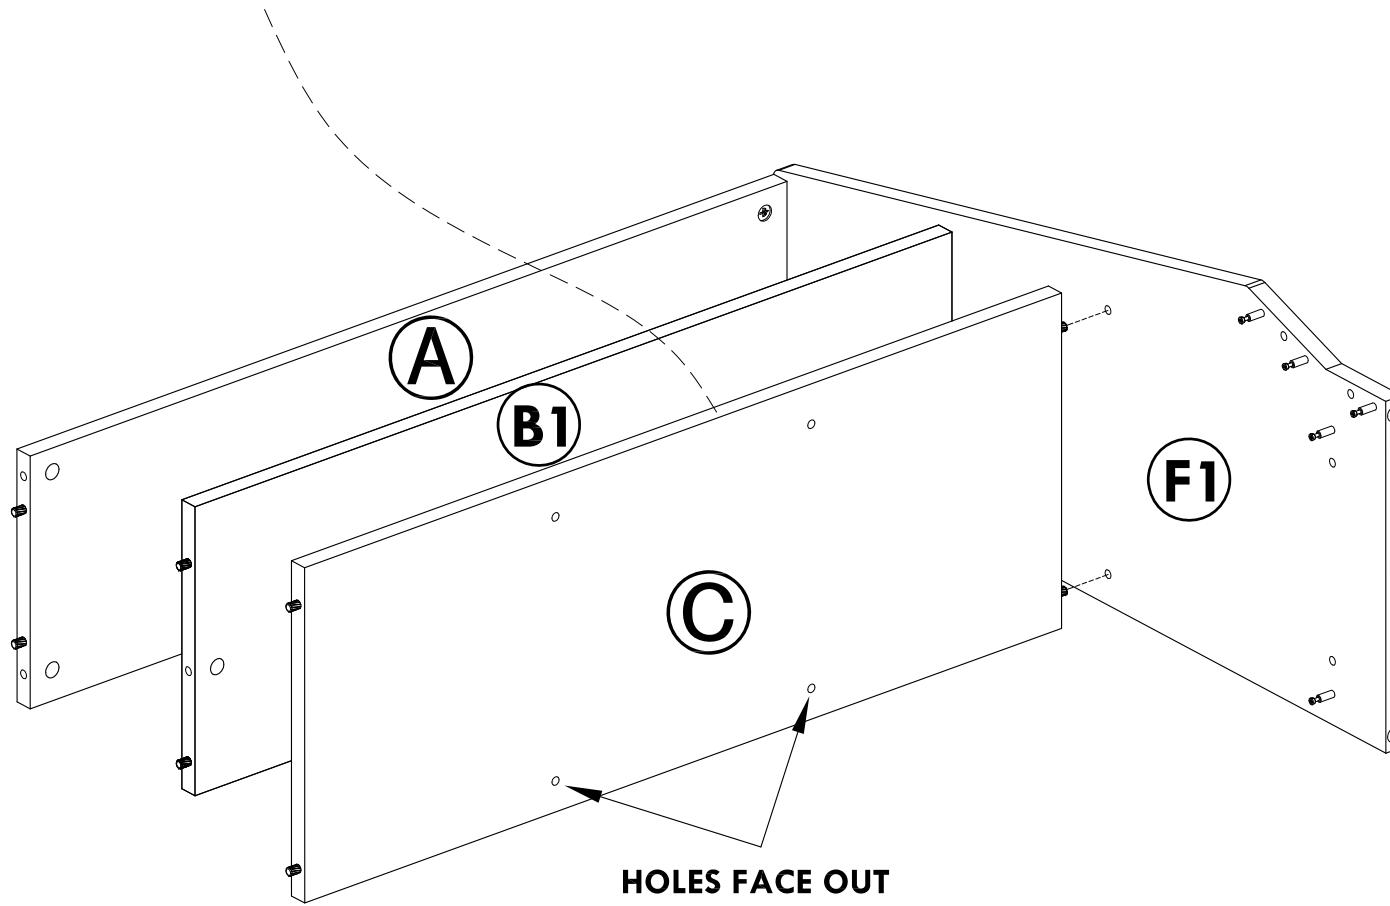

Assembly


7. Connect Partition Board (G) to Middle Shelf (C).

REQUIRED

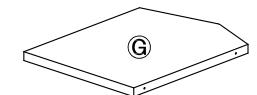



(G) Partition Board

FINISHED EDGES FACE UP !

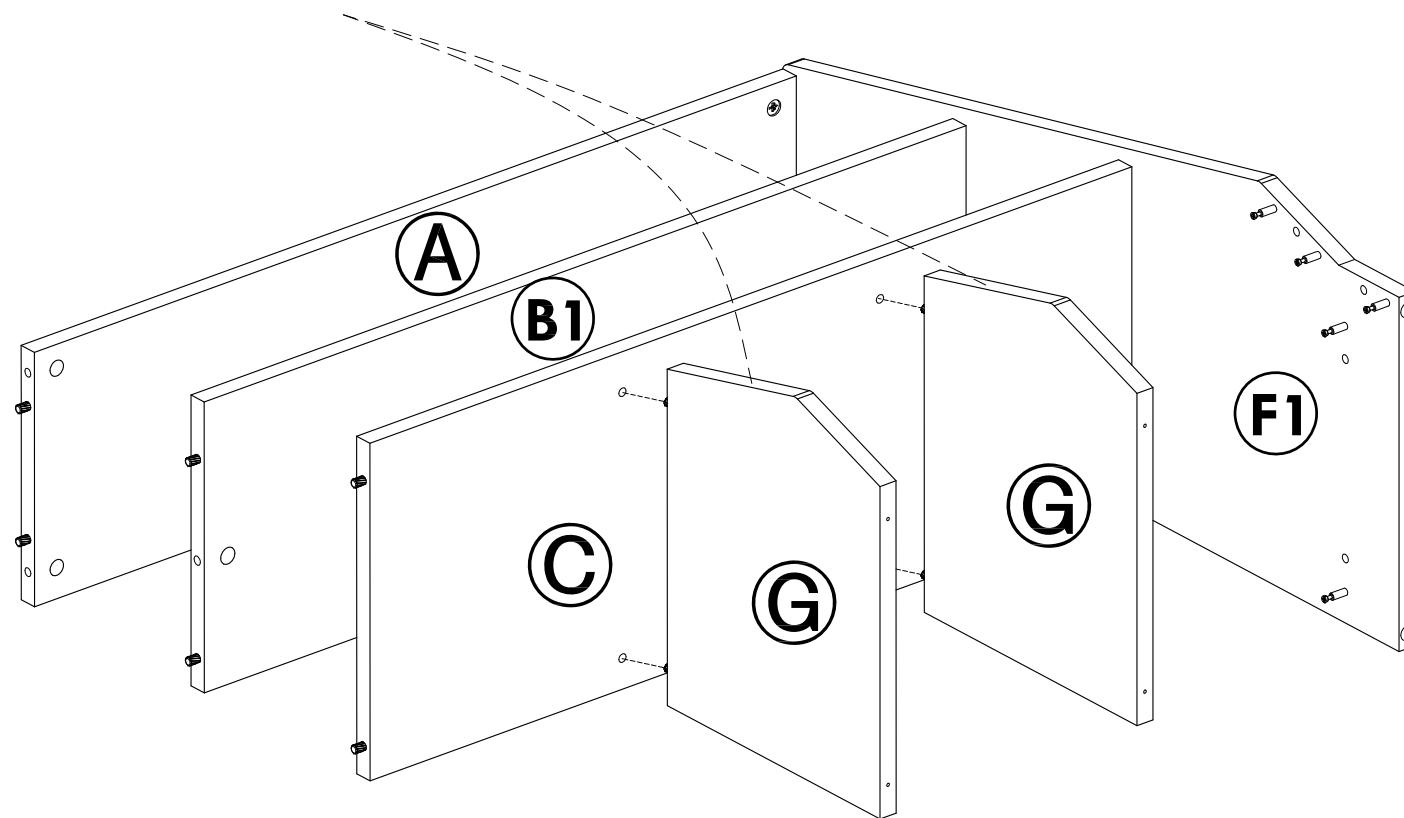

Assembly

8. Connect Kick Panel (I) to Bottom Panel (D).

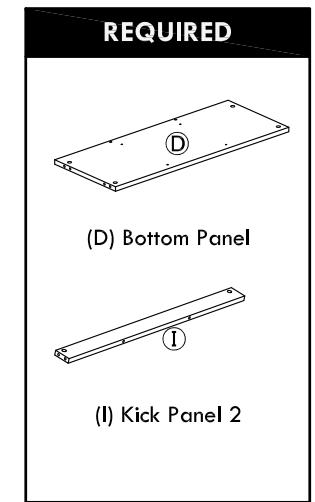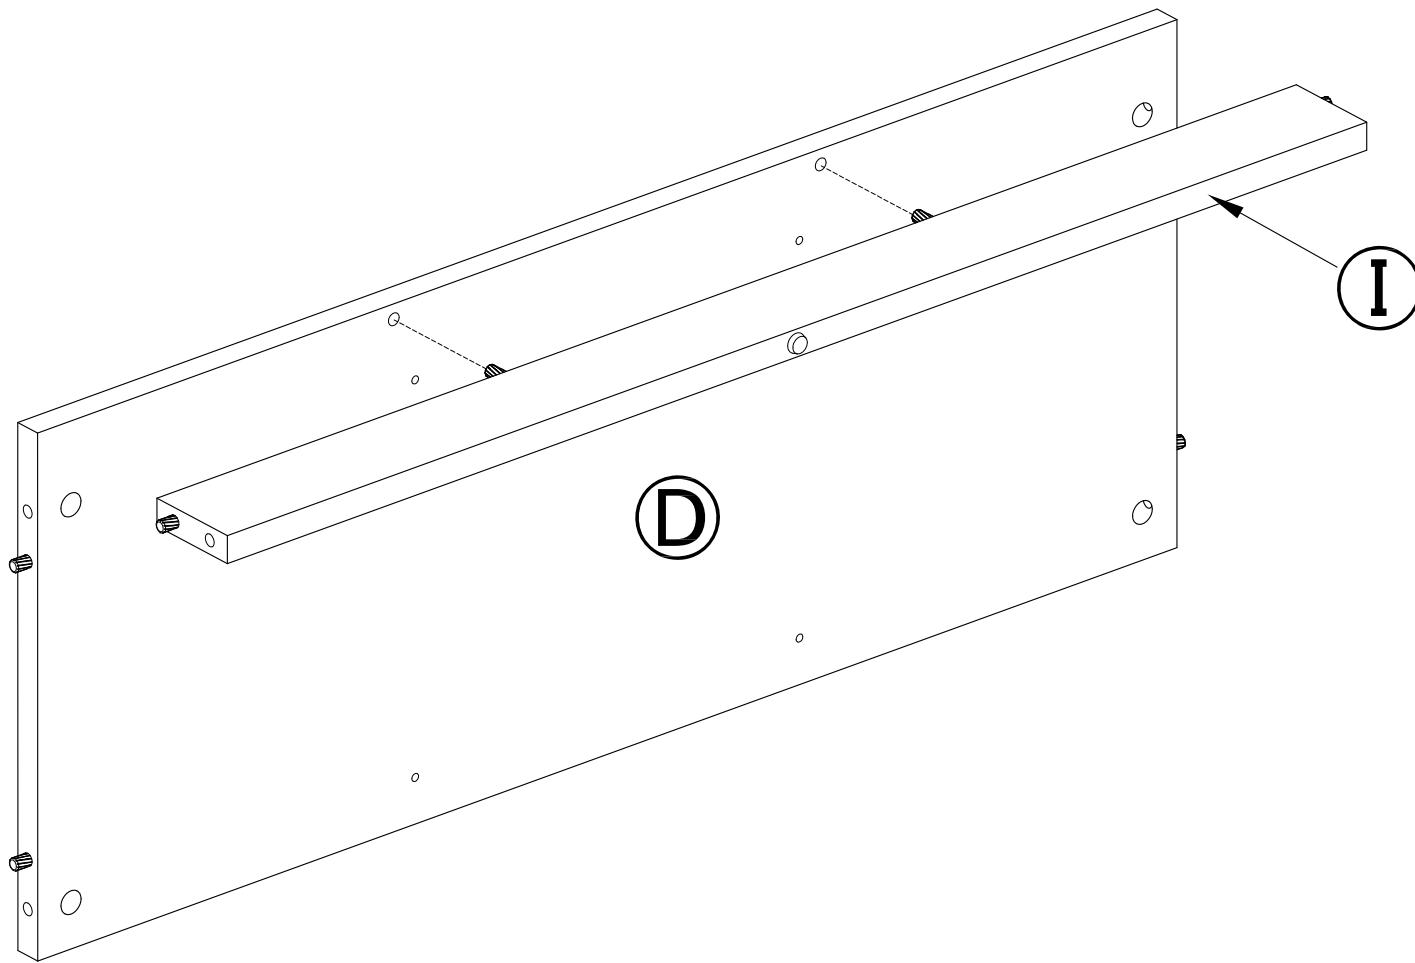


Assembly

9. Connect Bottom Panel (D) to Right Side Panel (F1).

Use **Screw (4)** to attach Bottom Panel (D) to Partition Board (G).

Insert **Cam Locks (1)** into Bottom Panel (D).

Using a flat head screwdriver, turn each **Cam Locks (1)** 180° clockwise.

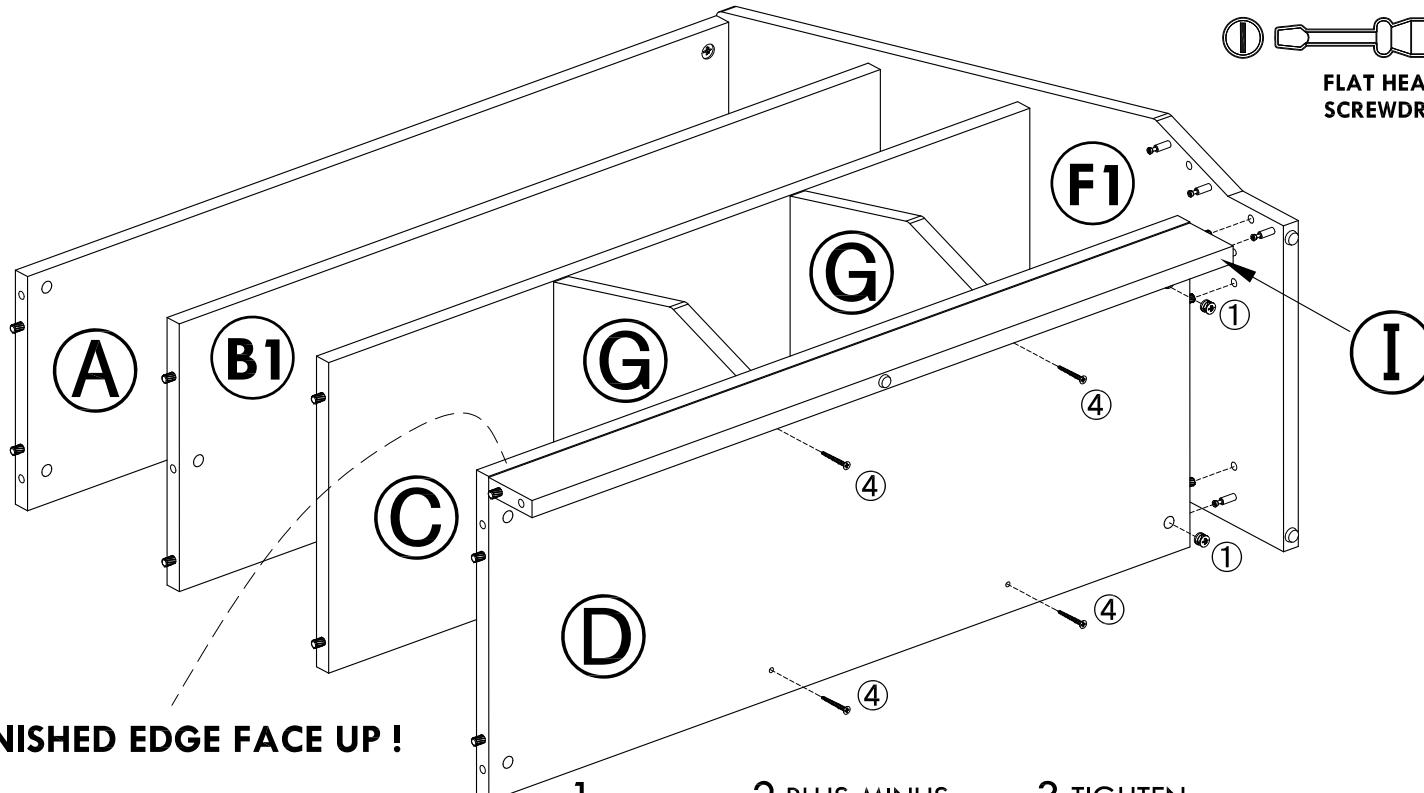

PHILLIPS
SCREWDRIVER



FLAT HEAD
SCREWDRIVER


REQUIRED



(1) Cam Lock x2



(4) Screw x4

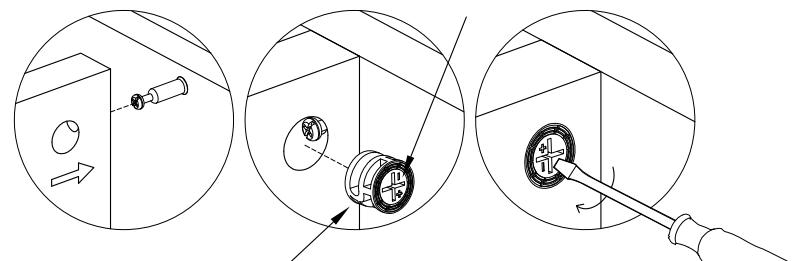


INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL

ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

Assembly


10. Attach Kick Panel (H) to Right Side Panel (F1).

REQUIRED

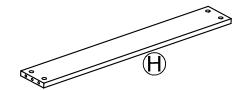

(H) Kick Panel 1

FINISHED EDGE FACE UP !

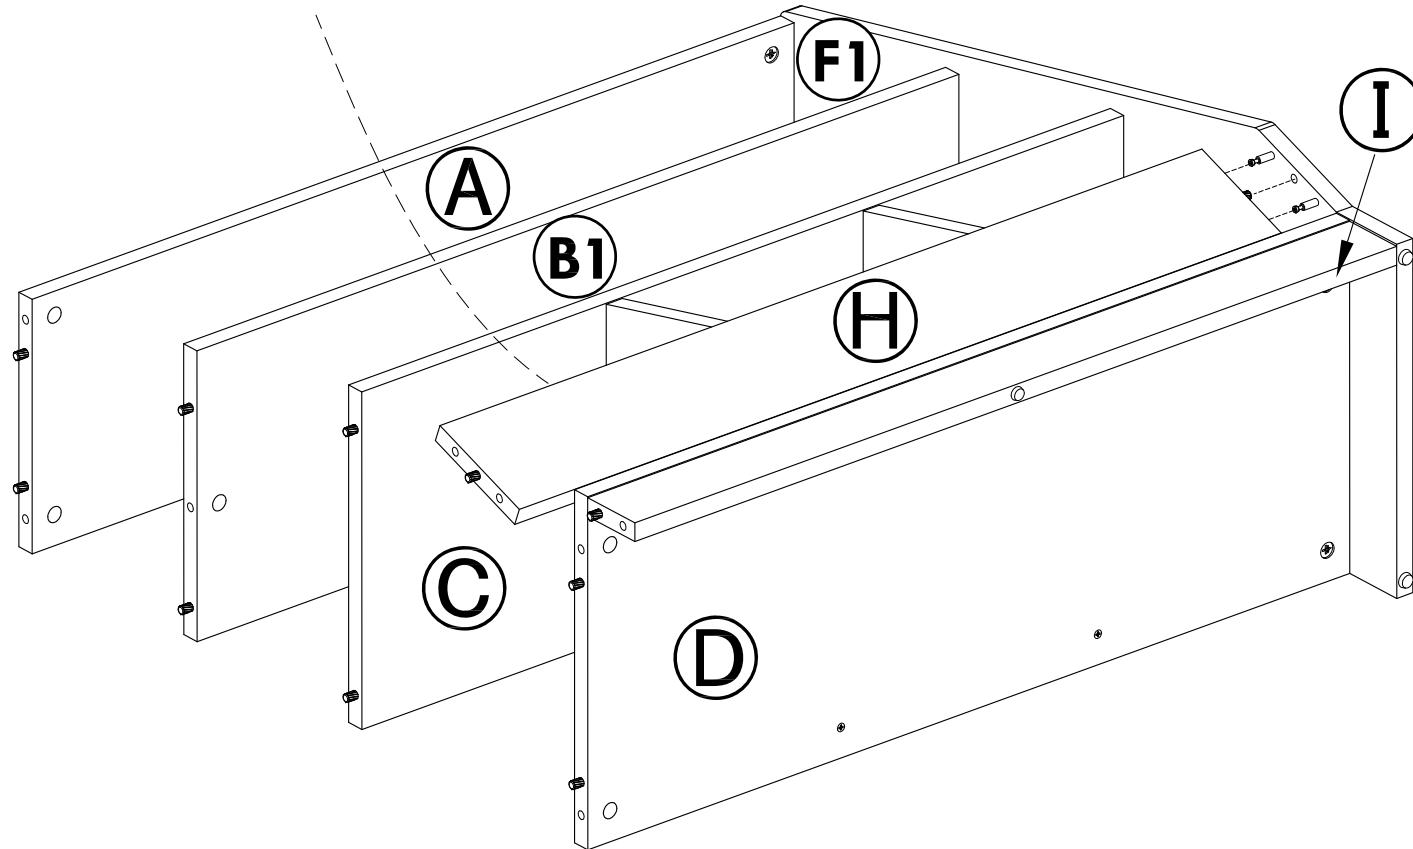

Assembly

11. Attach Left Side Panel (E1) to Structure.


Insert **Cam Locks** (1) into (A) , (B1) & (D) Panels.

Using a flat head screwdriver, turn each **Cam Locks** (1) 180° clockwise.



FLAT HEAD
SCREWDRIVER

REQUIRED


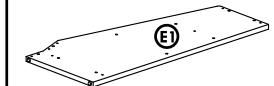


(E1) Left Side Panel



(1) Cam Lock x5

FINISHED EDGE FACE UP !

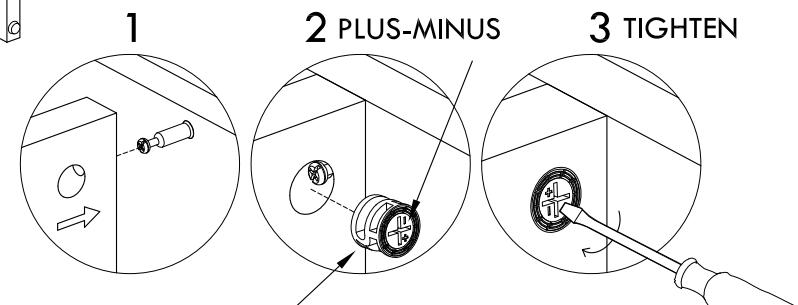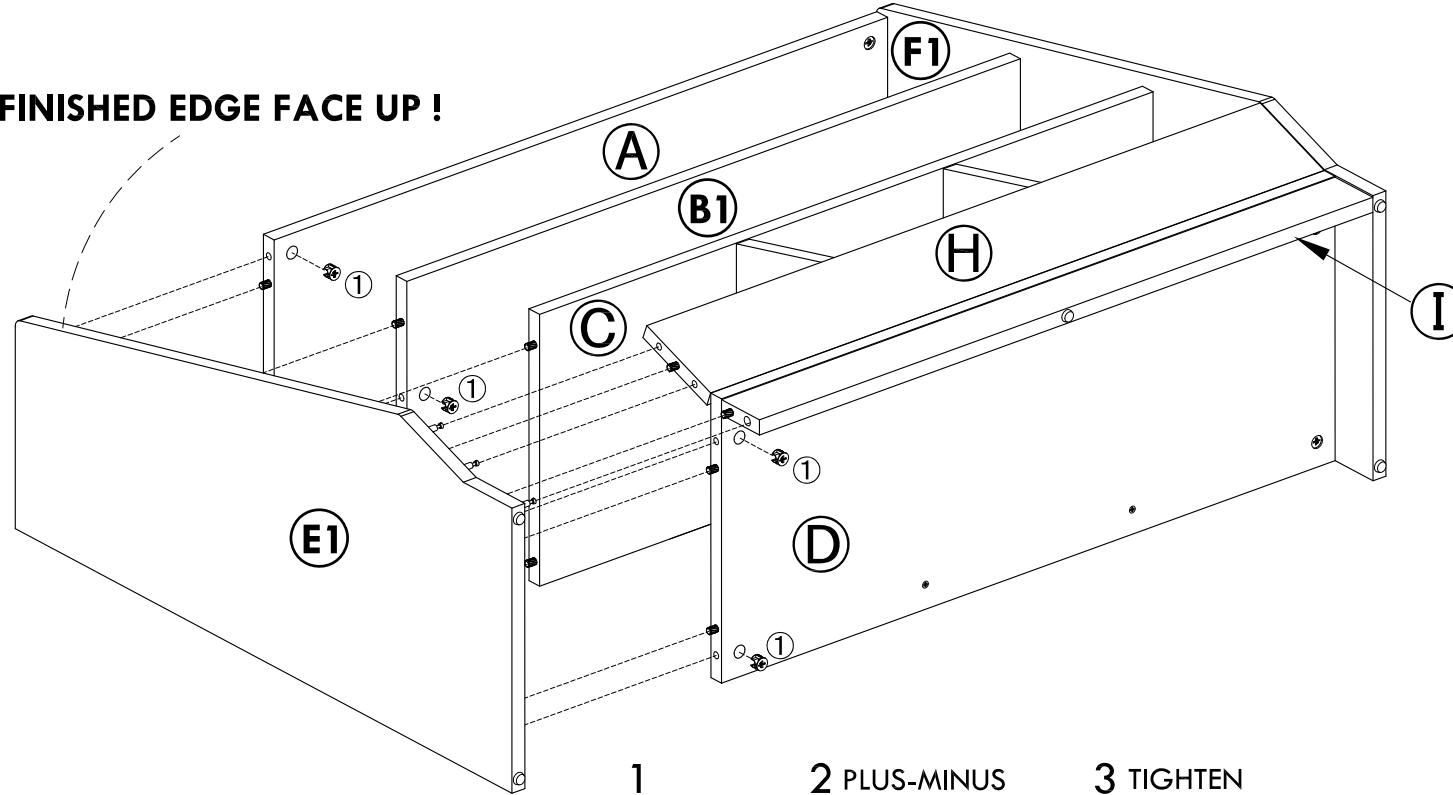

INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL

ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN

Assembly

12. Carefully flip unit over so it is face down.


Insert **Cam Locks** (1) Into Kick Panels (H) & (I).

Using a flat head screwdriver, turn each **Cam Locks** (1) 180° clockwise.





FLAT HEAD
SCREWDRIVER

REQUIRED

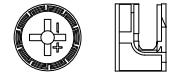

(1) Cam Lock x6

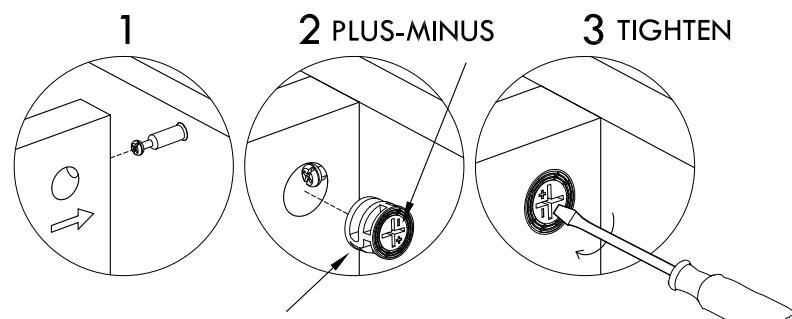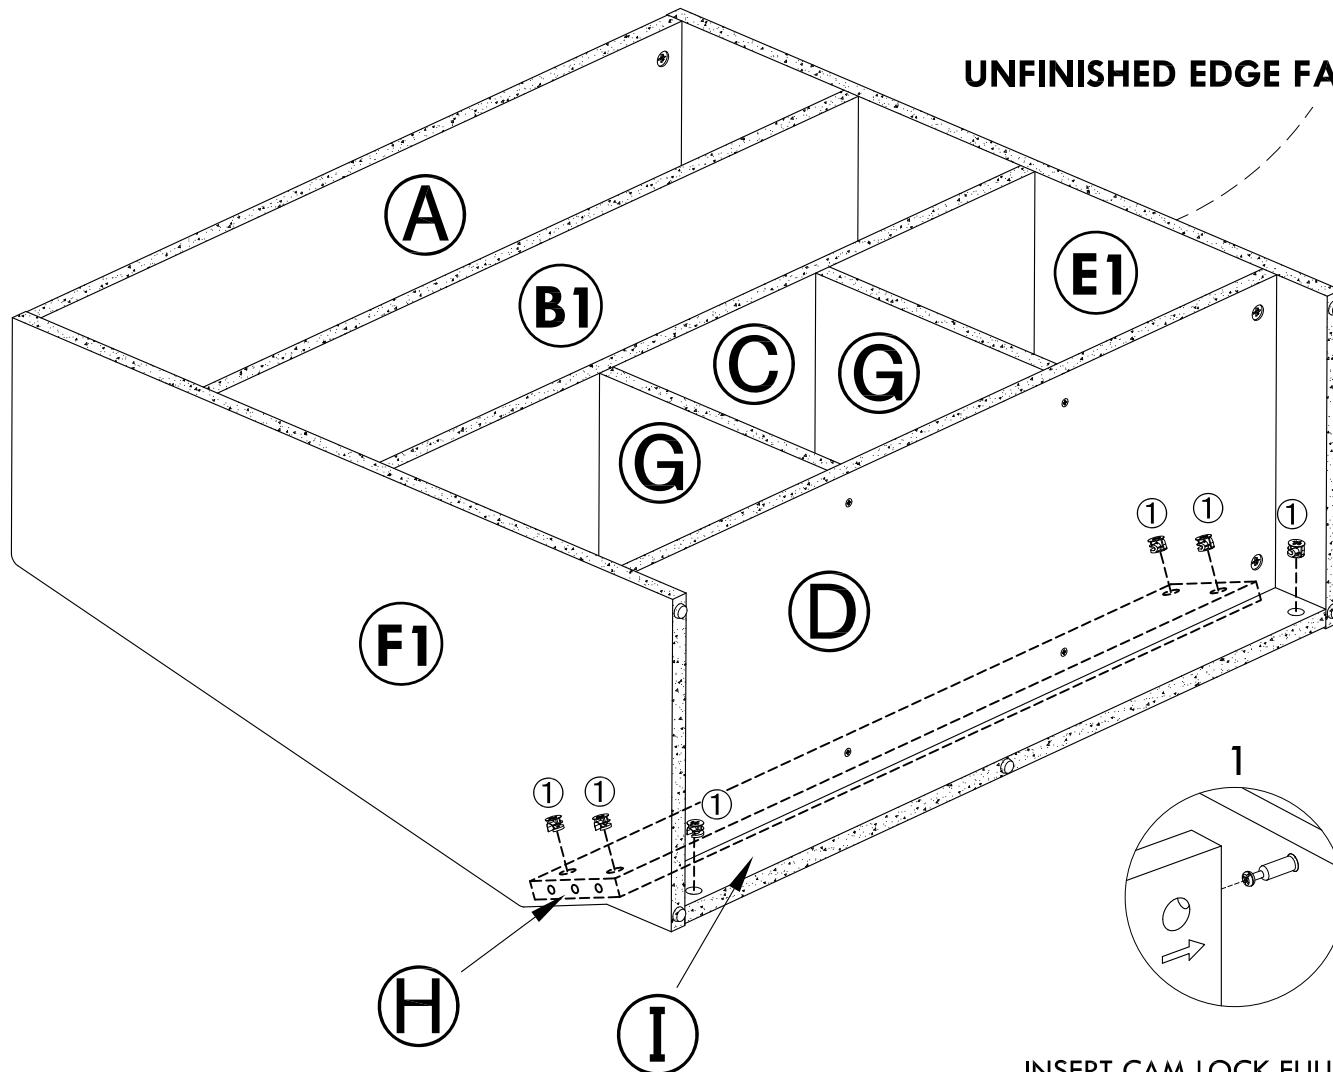

INSERT CAM LOCK FULLY INTO HOLE
WITH PLUS-MINUS SYMBOLS FACING
PREDRILLED HOLE IN EDGE OF PANEL

ROTATE CAM LOCK
CLOCKWISE 180° TO
SECURELY FASTEN





Assembly

13. Align and attach **Back Panel (J1)** to the unit using **Nails (5)** & **Nail Holder (7)** .

Nail holder will not be used in middle section.

Place a nail into the nail holder and slide the nail holder up to the side of the unit until flush. The nail will be positioned in the center of the particle board. Hammer the nail slightly into board, then slide nail holder off and hammer the nail the rest of the way in.


**UNFINISHED
EDGE FACE UP !**

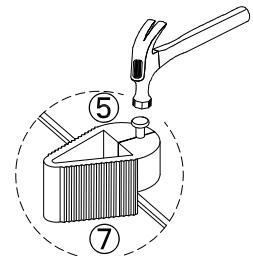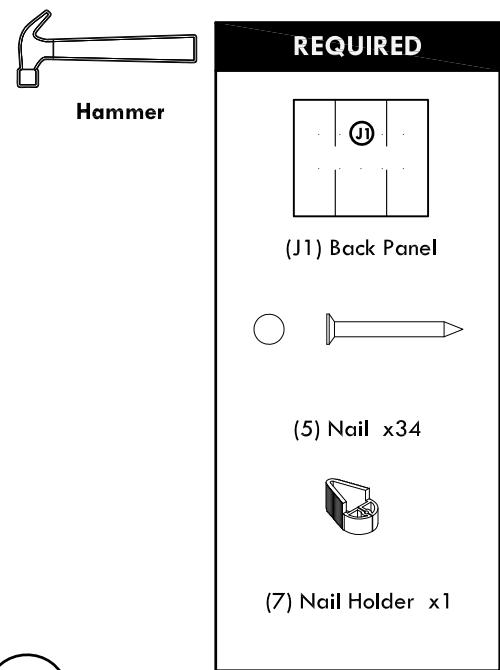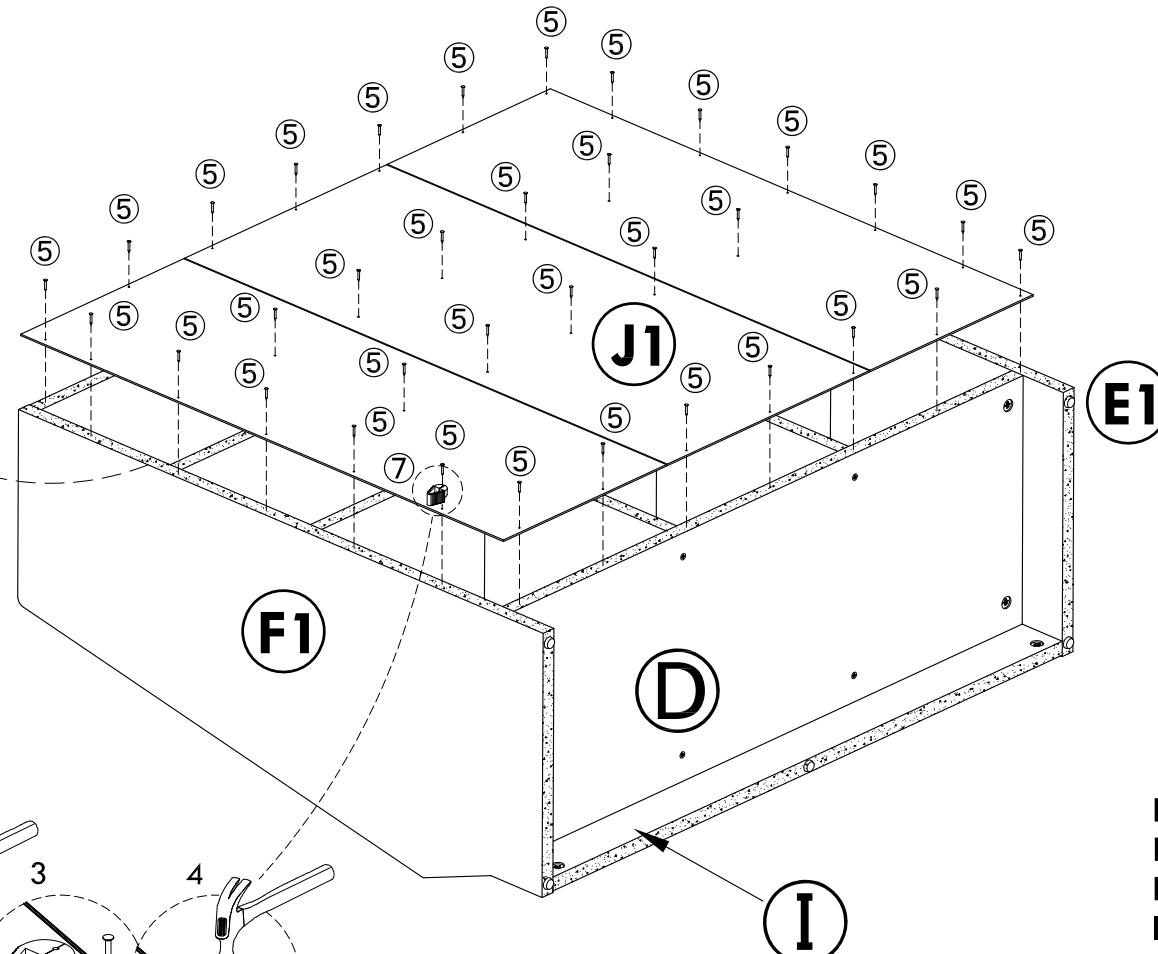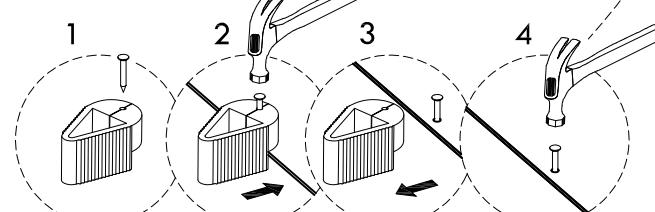

NOTE: TO KEEP BACK PANEL PROPERLY ALIGNED, START BY HAMMERING ONE NAIL IN EACH CORNER, THEN HAMMER IN REMAINING NAILS.

Assembly

14.

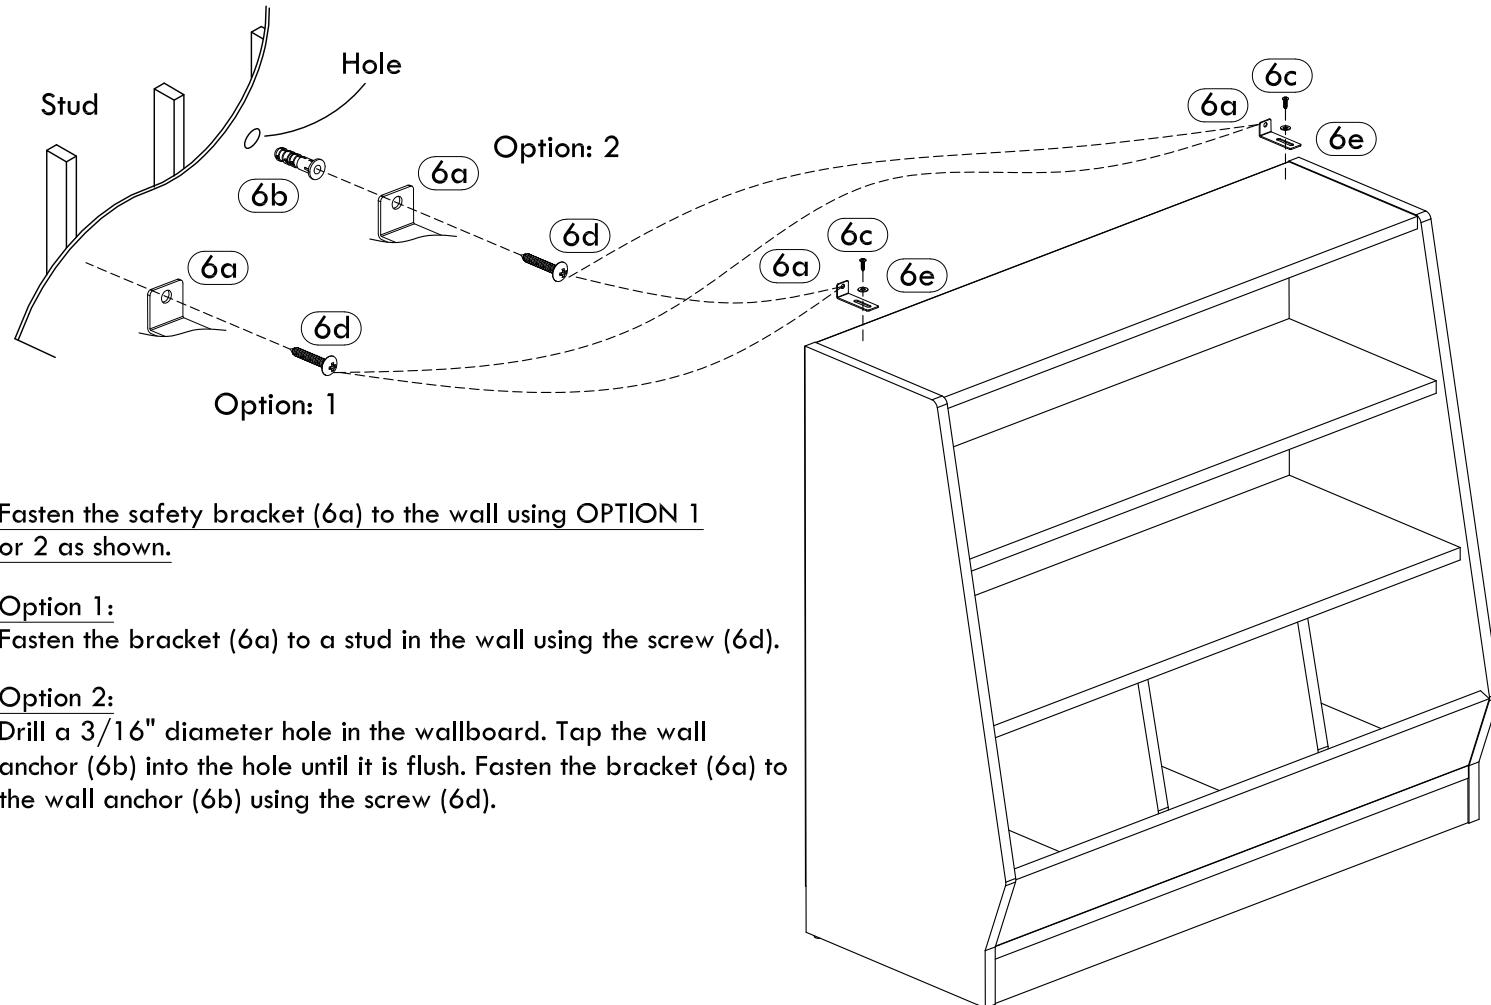

Fasten the safety bracket (6a) to the wall using OPTION 1 or 2 as shown.

Option 1:

Fasten the bracket (6a) to a stud in the wall using the screw (6d).

Option 2:

Drill a 3/16" diameter hole in the wallboard. Tap the wall anchor (6b) into the hole until it is flush. Fasten the bracket (6a) to the wall anchor (6b) using the screw (6d).

Specifications

Weight 56.32 LBS	Weight Capacity •Top panel can support up to 24.2 lbs Shelf 1 can support up to 22 lbs Shelf 2 can support up to 33 lbs Bottom panel can support up to 33 lbs	Materials 96% particle board 3% paperboard 1% Iron
Dimensions 35.04" W x 15.00" D x 32.99" H		

Designed in the USA
Manufactured in China by Huisen Furniture (Longnan) Co., Ltd